

KLASSY GRILL SANDWICH MAKER

make the tastiest grill sandwiches

BOROSIL®

Performs Beautifully



IS: 302-2-9



CM/L - 9512535817



USER MANUAL

BSM07

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL KLASSY GRILL SANDWICH MAKER!


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

- Use only on 230VAC/ 50 Hz. For household use only.
- Do not touch hot surfaces. Use handles.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Do not use outdoors or for commercial purposes. (For household use only)
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the product by yourself. Contact Borosil Customer Care Toll Free No. **1800 2106 520/1800 224 552** or **myborosil@borosil.com** for examination and repair.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting or taking off parts, and before cleaning appliance.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Do not operate the appliance for any other than its intended use.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- To disconnect, remove plug from wall outlet, when finished using.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

PARTS IDENTIFICATION

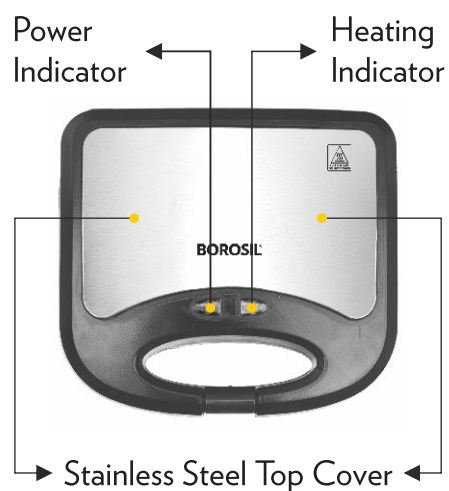

TECHNICAL SPECIFICATIONS	
Product	: SANDWICH MAKER
Model Name	: KLASSEY GRILL
Item Code	: BSM07

Rated Voltage	: 230VAC
Rated Frequency	: 50Hz
Rated Power	: 800W
Household Use Only	

BEFORE USING YOUR SANDWICH MAKER

- Read all instructions carefully and keep them for future reference.
- Peel off any plastic materials and packaging materials, and check that the cooking plates are clean and free of dust.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACE

- If necessary, wipe over with a damp cloth.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.
This will assist in the removal of the Sandwiches after cooking results.
- Spread over with an absorbent kitchen towel and wipe off any excess oil.

Note: When your KLASSY GRILL SANDWICH MAKER is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS:

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING:

Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD:

A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the bottom of the unit.

HOW TO USE

- Before using first time for toasting/grilling, close the Klassy Grill Sandwich Maker and plug it into the wall outlet, you will notice that the Red power light will come on, indicating that the Klassy Grill Sandwich Maker has begun preheating.
- It will take approximately 2-3 minutes to reach baking temperature, the green light will illuminate.
- Open the lid, put the food on the bottom cooking plate.
- Close the lid. Green light will go off.
- Wait till the Green light goes off. Sandwich/food is ready to eat. If you want more browning/toasting, put the sandwich/food in between plates and close the lid again. The Green light will light again for second cycle toasting/grilling. You can repeat the same for further toasting/browning as per your taste.
- When the food is cooked use the handle to open the lid. Remove the food with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cooking plates.
- After finishing cooking, disconnect the plug from the wall outlet and leave unit open to cool.

CLEANING AND CARE

- Always unplug the Klassy Grill Sandwich Maker and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Klassy Grill Sandwich Maker for cleaning. Never immerse the Klassy Grill Sandwich Maker in water or place in dishwasher.
- Wipe cooking plates with a soft sponge to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the plates to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the Klassy Grill Sandwich Maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.

STORAGE

- Always unplug the Klassy Grill Sandwich Maker before storage.
- Always make sure the Klassy Grill Sandwich Maker is cool and dry before storing.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment !
Please remember to respect the local regulations : hand in the non-working electrical equipments to an appropriate waste disposal center.

WARRANTY FOR REPAIR AND SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 2106 520/1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use).
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired.
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE

MODEL CODE : BSM07

CUSTOMER'S NAME : _____

ADDRESS : _____

PHONE NO. RESIDENCE : _____ OFFICE : _____

DATE OF PURCHASE & BILL NO. : _____

DEALER NAME & SIGN : _____

CUSTOMER'S SIGNATURE : _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, Crescenzo, G-Block, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 2106 520/1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on    Borosil And You

Back Cover - Close Size - 140 x 215 mm