

## NIGHTGLIDE STEAM IRON

Easy ironing, everyday

# BOROSIL<sup>®</sup>

Performs Beautifully

SAFETY  
IS : 302-2-3



CM/L-4028850

**2**  
YEARS

WARRANTY ON PRODUCT



### USER MANUAL

BSI20W03

---

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

---

USER MANUAL - Close size - 98 (w) x 141.5 mm



## INTRODUCTION

Congratulations on your purchase of

### **BOROSIL NIGHTGLIDE STEAM IRON!**

## IMPORTANT SAFEGUARDS

 
**When using electrical appliances, basic safety precautions should always be followed including the following:**

- Use only on 230 V AC/ 50 Hz. For household use only
- Do not touch hot surfaces. Use handles
- During first usage, the iron may emit fumes. This is a normal occurrence, which should not cause undue concern
- Do not immerse the cord, plug or product in water or any other liquid to protect against risk of electric shock
- Do not use outdoors or for commercial purposes  
(For household use only)
- Close supervision is necessary when the appliance is used by or near children. Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the product by yourself.  
Contact our Customer Care No. **1800 224 552** or **myborosil@borosil.com** for examination and repair
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces. Do not operate the appliance for any other than its intended use. This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance
- After usage, Unplug the iron from wall outlet and disconnect
- Do not leave the appliance unattended when switched on

## DESCRIPTION OF PRODUCT

### Main features and structure:

The product has many functions such as temperature regulating, Spraying, Dry Ironing, Steam, Steam Burst, Self-Cleaning Function, Anti-Scale Function, Anti-Drip function etc. and is with characteristics: luxury shape, high heat efficiency, easy using, good ironing result, work saving and time saving, and so on.

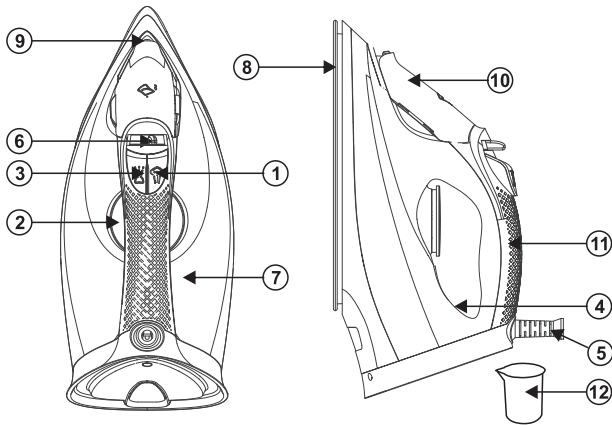

### PART DESCRIPTION

- |  |                             |
|--|-----------------------------|
| 1) Steam burst button                    | 7) Water tank               |
| 2) Temperature regulating knob           | 8) Ceramic coated soleplate |
| 3) Spray button                          | 9) Spraying nozzle          |
| 4) Power indicator                       | 10) Cover of water intel    |
| 5) Swivel cord                           | 11) Handle                  |
| 6) Self cleaning cum steam control lever | 12) Water cup               |

### TECHNICAL DATA

- Rated Power : 2000W
- Rated Power Supply : 230V-50Hz, CLASS-I

## HOW TO USE

### Read all instructions before using the iron

For house hold use only

- Use the iron for its intended purpose, for ironing fabrics on board.
- To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body.
- The iron should always be turned 'OFF' before plugging or unplugging from outlet. Never pull cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surface. Allow the iron to cool completely before storing.
- Always disconnect iron from electrical outlet for filling or emptying water and when not in use.
- To avoid risk of electric shock, do not operate iron with a damaged cord or if the iron has been dropped or damaged. For repair, take it to an

 
Contact our Customer Care No. **1800 224 552** or **myborosil@borosil.com** for examination and repair

- Close supervision is necessary for this appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Hot water may leak from the iron. Use caution when filling or turning the steam iron upside down.
- To protect against burns or injury to persons, do not direct steam toward the body when ironing.
- The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

### How to fill with water:

Make sure the iron is turned off and the power cord is unplugged from the electrical outlet.

- Set the 'Variable' steam knob to the '0' position before filling the iron with water.
- Open the 'Water Fill Door' Opening and fill the Tank up to the 'MAX' Line on the tank.
- The water level can be observed through the transparent part of the tank, when iron placed vertically, in case of water level becomes low, refill the tank, following the procedure described in steps 1 to 3 above.
- Pour out the remaining water after use.

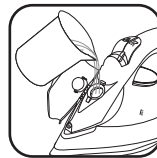


**Note:**

Preferred potable water, however tap water can be used in this iron. Do not use water additives or substitute water such as linen or scented water in the steam iron, they can stain fabrics or damage the iron. Do not fill the water more than the 'MAX' position.

**How to use as dry iron:**

- Position the iron vertically.
- Plug the iron.
- Set Steam regulating Knob to MIN position.
- Preheat the iron until the indicator light goes out.  
Turn the Temperature regulating knob to the required setting for different types of fabric.

 Now dry ironing can begin.

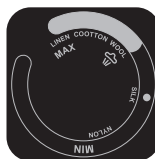**Note:**

Set the steam control lever to steam off position.

**How to use the spray:**

Before using the spray feature, check the fabric label for ironing instructions because some fabrics may be spotted or stained with moisture.

The spray feature is particularly helpful for removing stubborn wrinkles and where extra dampening is needed. The spray may be used with steam or dry ironing. Simply pump the Spray Mist knob when spray is desired.

**How to use as steam iron:**

Fill the iron as described in 'How to fill with water'.

- Position the iron vertically and turn the Steam Control Lever to the steam position.
- Plug the Cord into the electrical outlet.
- Set the Temperature Control Dial to the steam position.  
Steam Ironing is only possible when at higher temperature settings indicated with 'MAX' mark; otherwise the water will leak from the soleplate.
- Preheat the iron until the indicator light goes out. The light will turn off when the indicated setting reaches the correct temperature.
- Turn the Temperature regulating knob to the required setting for different types of fabric.

Now steam ironing can begin.



**How to use the burst of steam:**

The burst of steam feature provides additional steam for removing stubborn wrinkles. It may be used with steam or dry ironing. Press the Steam Burst button to release the surge of steam. Pressing the button several times may be necessary to prime the surge system. Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.

**Note:**

For optimum steam quality, do not apply more than three successive shots after the indicator light goes off.

**Anti-Scale function:**

The anti-scale function is a permanent system located inside the water tank to eliminate hardness from the water and to reduce the problems connected with limescale build-up.

**Anti-Drip function:**

This system controls the water flow to the soleplate at all times. Below a certain temperature, the anti-drip function cuts off the flow of water and stops the iron from dripping onto the fabric.

**Maintenance:****After each use:**

- Turn the iron off and unplug.
- Empty the iron immediately after using. Do not store the iron with water in it.
- Wait until the iron has cooled before storing it, and always set it on the Heli Rest to protect the soleplate from scratches, corrosion or stains.
- After letting iron cool down completely, store the iron vertically in a safe place.

**Outside surface of the iron:**

 
After unplugging and cooling the iron, simply wipe off with a damp cloth and if necessary, use a mild detergent.

NEVER USE ANY HARSH CLEANERS.

**Ceramic Coated Soleplate :**

Starch and other residue may be easily removed from the soleplate with a damp cloth. To avoid scratches the finishing, never use a metallic pad to clean the Soleplate, and never place the iron on a rough surface.

If synthetics are ironed at too high temperature not only is the fabric usually ruined, but the iron Soleplate is often covered with the melted remains of the synthetic fabric. The best way to remove synthetic residue from the Soleplate is to heat the iron and to iron over an old cotton rag.



**CAUTION :**

Never Use steam iron cleaners in the iron, since they may damage the working parts of the iron.

**Self Cleaning :**

**IMPORTANT :** Your iron will give the best ironing results and last longest if you apply the Self Cleaning once a month, or more depending upon the usage.

- Filling the water tank up to half with water.
- Position the iron on its rear heel.
- Select the temperature control dial to 'MAX'.
- Plug the iron.
- Allow the iron to heat up until the indicator light first goes out.
- Unplug the iron from the electrical outlet.
- Keep the iron horizontally over the sink.
- Press down the 'Self Clean' button all the time. Boiling water and steam will now emit from the holes in the soleplate.
- Move the iron forwards and backwards while this happens; go on letting steam and water escape until the water tank is virtually empty.
- Release the 'Self Clean' button.
- Plug in the iron
- Set the temperature dial to the 'MAX' position, let the iron heat up again, the remainder of the water inside the steam chamber will now vaporize and leave the iron through the soleplate.

During this process of dry steaming it is advised to use it over an old piece of cloth.

**Descaling:**

For prolong efficiency of this iron, follow these steps occasionally:

- Unplug the iron and allow it to cool down.
- Locate the water cup that accompanied the iron. Fill it with water 3/4 full. Add 1 teaspoon of salt to water and fill the water tank with this solution.
- Leave the solution in the water tank for 15 minutes, shaking occasionally, and then empty it.
- Fill the water tank a second time with salt water solution, shaking occasionally and empty it again after 15 minutes.
- Fill the tank with fresh water to rinse and empty.



#### **NOTE**

- Do not touch the sole plate while the iron is hot.
- Do not leave the iron unattended while connected to the electrical supply. Never immerse the dry iron in water.
- After Iron is switched off, the sole plate will still be hot for sometime. Do not touch or keep the plate on the cloth during this time

## **CONSUMER SAFETY INFORMATION**

#### **GROUNDING INSTRUCTIONS :**

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

#### **WARNING :**

Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

#### **POWER CORD :**

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.

## **ENVIRONMENT FRIENDLY DISPOSAL**



You can help protect the environment !

Please remember to respect the local regulations : hand in the non-working electrical equipments to an appropriate waste disposal center.

## WARRANTY FOR REPAIR AND SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or Borosil Authorized Service Centre and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. Coating of soleplate or the damage of working parts while in use do not cover any warranty.
13. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
14. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
15. If the product is used with any type of adapter or connector.
16. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED  
BY THE DEALER ON THE DATE OF PURCHASE

MODEL CODE: **BSI20W03**

CUSTOMER'S NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PHONE NO. RESIDENCE: \_\_\_\_\_ OFFICE: \_\_\_\_\_

DATE OF PURCHASE & BILL NO.: \_\_\_\_\_

DEALER NAME & SIGN: \_\_\_\_\_

CUSTOMER'S SIGNATURE: \_\_\_\_\_

DEALER'S STAMP

9

# BOROSIL®

## CORPORATE OFFICE :

### BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.  
Website: [www.borosil.com](http://www.borosil.com) | Customer Care Toll Free No.: 1800 224 552  
Email id: [myborosil@borosil.com](mailto:myborosil@borosil.com) | Tel: 022 6740 6300 | Fax: 022 6740 6514  
CIN NO.: L36100MH2010PLC292722

## SALES OFFICE :

### MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,  
Kurla (W), Mumbai - 400 070.  
Tel.: 022 6740 6400 | Fax: 022 6740 6444  
email: [mumbaisales@borosil.com](mailto:mumbaisales@borosil.com)

### DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.  
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689  
email: [delhi@borosil.com](mailto:delhi@borosil.com)

### CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahaddammal Road, Nungambakkam, Chennai - 600 034.  
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014  
email: [borosilmsa@ethnet](mailto:borosilmsa@ethnet) / [chennai@borosil.com](mailto:chennai@borosil.com)

### KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.  
Tel.: (033) 2229-9166, 2226-2045  
email: [calcutta@borosil.com](mailto:calcutta@borosil.com)

### GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,  
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at [www.myborosil.com](http://www.myborosil.com)

Follow us on    Borosil And You

Back Cover - Close Size - 98 X 141.5 mm