

QUICK 1.3 L MULTI KETTLE

Brew, boil and steam with ease

BOROSIL®

Performs Beautifully



USER MANUAL

BKE06

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL QUICK 1.3 L MULTI KETTLE!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precaution should always be followed including the ones mentioned below:

READ ALL INSTRUCTION BEFORE USING THE PRODUCT

1. Use only with 230V ~ 50Hz power supply.
2. Do not use outdoors or for commercial purpose. This appliance is intended for household use only.
3. Do not operate any appliance with a damaged cord or plug or others parts are damaged or which has been malfunctioned or has been damaged any manner. In order to avoid the risk of electric shock, never try to repair the appliance yourself.
4. Contact your local dealer or Borosil Authorized Service Centre or Borosil Customer Care, Toll free no. **1800 2106 520/1800 224 552**
5. Unplug from outlet when not in use. Always disconnect the appliance from the power supply if it is left unattended and before assembling, disassembling or cleaning. When removing the plug from the wall socket never pull on the power cord.
6. Before using, place the appliance on an even, stable surface; operate according instruction given.
7. Keep the appliance at least 6" (152 mm) away from the walls for proper ventilation.
8. Do not let power cord hang over the edges of the table or counter, or touch hot surface.
9. Do not immerse cord, plug or base of the appliance into the water as may cause electric shock.
10. Do not operate the appliance for any other than its intended use.
11. This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
12. Do not touch any part of the kettle except the handle when the kettle is fully filled with boiling water to prevent from scalding
13. Pour away the very first batch of water boiled with this kettle. After this step, it is ready for use.

14. Pour out the boiling water at one go, in order to enable the temperature of the kettle to decline.
15. After boiling, please do not touch glass lid as it can be hot. Use only the lid knob to lift the lid. To avoid getting burnt by steam, do not open the lid in a hurry.
16. If the kettle is overfilled, boiling water may spill out.

DESCRIPTION OF PRODUCT



TECHNICAL SPECIFICATIONS	
Product	: ELECTRIC STAINLESS STEEL KETTLE
Model Name	: QUICK 1.3 L MULTI KETTLE
Item Code	: BKE06
Max Capacity	: 1.3 L
Rated Voltage	: 230VAC
Rated Frequency	: 50Hz
Rated Power	: 600W
Household Use Only	

HOW TO USE

NOTE: During cooking, stir the contents at regular intervals to avoid burning of food. Place the unit on the level surface.

FOR BOILING WATER:

1. Open the kettle by lifting the lid up and fill water into the multipurpose kettle. Then place the lid back.
2. Place the kettle on the power base and connect to power supply.
3. Do not fill water more than "Maximum" level or less than "Minimum" which is marked in the multi kettle.
4. Turn the temperature control knob clockwise to "Max" position.
5. Place the glass lid back. Position the lid so that the steam vent on the lid of the kettle is facing away from you.
6. Once the water starts boiling, turn the temperature knob to "Off" position, switch off the unit from mains, then lift.

FOR BREWING TEA:

1. Use the above procedure to heat the water.
2. Once the water has boiled, add the required quantity of tea leaves. Let the tea brew for a few minutes. After the tea has brewed, turn the temperature knob to "Off" position, switch off the unit from mains. Pour the brewed tea to a suitable container.

Important: Do not use the multi kettle for boiling milk.

FOR PREPARING INSTANT NOODLES, PORRIDGE, SOUP, INSTANT PASTA ETC.,

1. Add required quantity of water as suggested by the recipe.
2. Switch on the multi kettle by switching on the mains.
3. Turn the temperature knob to "Max"
4. Wait till water comes to boiling mode.
5. Add the required quantity of instant noodles, porridge, soup, instant pasta etc.
6. Mix the ingredients thoroughly.
7. Place the glass lid.
8. Follow the timing and the procedure as suggested by the recipe.
9. Once the recipe is ready, turn the temperature knob to "Off" position, switch off the unit from mains, open the glass lid and transfer the contents to a serving bowl.

CAUTIONS WHILE COOKING

- Lift the kettle from the power base and then pour the contents
- Be careful, while pouring the contents from the kettle, since the boiled contents may cause scalding. Do not open the lid while the contents in the kettle are hot.
- Never lift the kettle from the power base while the unit is in operation. Switch off from the mains before lifting.

BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water to re-boil.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to come in contact with these parts.
2. Wipe the outer body with a damp cloth or cleaner. Do not use a poisonous cleaner.
3. Remember to clean the filter at regular intervals.
Caution: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle as these will damage the glossy finish.
4. When not in use or when stored, the power cord can be wound under the bottom of kettle.

WARRANTY FOR REPAIR & SERVICES

This product comes with a warranty of One Year on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 2106 520/1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorised Service Centre** and provide information about the defect with the model number and the serial number of the product.

THE WARRANTY IS NOT VALID IN CASE:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use).
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired.
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations; hand in the non-working electrical equipment to an appropriate waste disposal center.

BOROSIL®

WARRANTY CARD

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE

MODEL CODE : **BKE06**

CUSTOMER'S NAME : _____

ADDRESS : _____

PHONE NO. RESIDENCE : _____ OFFICE : _____

DATE OF PURCHASE & BILL NO. : _____

DEALER NAME & SIGN : _____

CUSTOMER'S SIGNATURE : _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, Crescenzo, G-Block, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.myborosil.com | Customer Care Toll Free No.: 1800 2106 520/1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahadammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhau, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



GOT A SERVICE-RELATED QUERY OR
NEED CUSTOMER SUPPORT?



SCAN THE QR CODE &
PLACE YOUR
SERVICE REQUEST
ON WHATSAPP 24 x 7
+91 7208487334



TOLL FREE NUMBER

1800 2106 520
1800 224 552

Now shop India's most trusted brand online at www.myborosil.com

Follow us on    Borosil And You