

COOLTOUCH 1.5 L DIGITAL KETTLE

Most safe and convenient way to boil

BOROSIL®

Performs Beautifully



USER MANUAL

BKE07

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL COOLTOUCH 1.5 L DIGITAL KETTLE!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precaution should always be followed including the ones mentioned below:

READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT

1. Use only with 230V ~ 50Hz power supply.
2. Do not use outdoors or for commercial purpose. This appliance is intended for household use only.
3. Do not operate any appliance with a damaged cord or plug or others parts are damaged or which has been malfunctioned or has been damaged any manner. In order to avoid the risk of electric shock, never try to repair the appliance yourself.
4. Contact your Borosil Authorized Service Centre or Borosil Customer Care, Toll free no. **1800 2106 520/1800 224 552**.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning. When removing the plug from the wall socket never pull on the power cord.
6. Before using, place the appliance on an even, stable surface; operate according instruction given.
7. Keep the appliance at least 6" (152 mm) away from the walls for proper ventilation.
8. Do not let power cord hang over the edges of the table or counter, or touch hot surface.
9. Do not immerse cord, plug or base of the appliance into the water as may cause electric shock.
10. Do not operate the appliance for any other than its intended use.
11. This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
12. The kettle is designed for heating water only. Never put any other liquid into the kettle.
13. Do not touch any part of the kettle except the handle when the kettle is fully filled with boiling water to prevent from scalding
14. Discard the first batch of boiled water after purchase. Post this step, it is ready for use.
15. Pour out the boiling water in one time, in order to enable the temperature of the kettle to lower.
16. Do not operate the appliance without water as a safety precaution.
17. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
18. Extreme caution must be used when moving an appliance containing hot water.
19. The appliance is not a toy. Do not let the children play it.
20. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
21. To disconnect, turn the switch to "off," then remove plug from wall outlet.

DESCRIPTION OF PRODUCT



- 1. Main Body
- 2. Handle
- 3. Spout
- 4. Light Indicator & Digital Temperature Display

- 5. Lid
- 6. Lid Open Button
- 7. Power Base
- 8. Power Cord

TECHNICAL SPECIFICATIONS	
Product	: DIGITAL KETTLE
Model Name	: COOLTOUCH 1.5 L
Item Code	: BKE07
Max Capacity	: 1.5 L
Rated Voltage	: 230VAC
Rated Frequency	: 50Hz
Rated Power	: 1350W
Household Use Only	

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS:

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING:

Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD:

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water twice. Wipe the surface with a damp cloth.

NOTE: The max capacity of kettle is 1.5L.

HOW TO USE

Position the kettle base on a dry and flat surface and away from any potential heat source

- Unwind the length of cord required to reach the mains electrical outlet. Ensure the cord does not hang over the work surface edge
- Remove the kettle from the base
- Open the lid. Fill the kettle with cool water, between the MIN and MAX markings located inside the kettle.
- Close the lid and place the kettle back onto its base. Make sure that the lid is securely closed before boiling.

Note: Always remove the kettle from its base before filling. Do not fill the kettle above the MAX mark or below the MIN mark on the water gauge.

- Plug the kettle into the mains electrical outlet.
- Press the power switch and its indicator will light up, and then the kettle starts to boil the water. Once you have made your touch-control selection, the kettle will sound with notification tone, indicating that the selected function is about to start.

- The display shows the real-time temperature, the 40°C, 60°C and 90°C setting lights will be on, the default selection is 100°C, and the 100°C light flashes, then enter into temperature selection stage.
- Press the "+" and "-" keys to select the temperature. During the temperature selection process, the selected temperature light keep flashing and the other light stay on.
- KEEP WARM: After temperature selecting, press "keep warm" button, the display will only show the selected temperature and the selected light on only. The kettle start to working, After the water boiled to the selected temperature, there will be a short-beep and automatically enter the keep warm stage. After 4-hours keep warm, the buzzer will beep 3 times, all the lights will off to end the keep warm stage, the kettle go into stand by stage.
- "START/CANCEL" : After temperature selecting, press "START/CANCEL" button, the display will only show the selected temperature and the selected light on only. The kettle start to work, After the water boiled to the selected temperature, the buzzer will beep 3 times, all the lights will off, the kettle go into stand by stage.

Note:

1. When the kettle enter into temperature selection stage, If there is no operation within 1 minute, the buzzer will sounds 3 times, All lights are off, and the product enters the standby state.
2. The display should always display the real-time temperature after power on;
3. The default selection is 100°C after power on;
4. After entering the working state, you can only exit the program by pressing the "START/CANCEL" key.
5. There will be $\pm 5^{\circ}\text{C}$ tolerance different from the setting temperature.
6. During operation, the digital display will illuminate with real time temperature and countup as the water temperature increases. The digital display will also countdown in real time as the water temperature decreases.

NOTE: Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch if be constrained or if the lid is opening.

- The kettle will switch off automatically and the indicator will turn off once the water has boiled. If necessary, it will take you 30 seconds to wait before pressing the power switch again to re-boil the water. You may shut off the power by directly lifting the kettle from the power base at any moment or press the "START/CANCEL" key to stop boiling process.
- Lift the kettle from the power base and then pour the water.

NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.

- The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

NOTE: Always disconnect the power supply when not use.

- Note that you can stop the kettle boiling or keep warm process at any time by pressing the START/CANCEL button.
- If you lift the kettle from its base during a functions cycle and place it back on to the base the kettle will enter standby mode and not resume the pre-selected

function cycle. The screen will display the real temperature of the water on the digital display. Please do not add water into the kettle during a boiling or keep warm cycle. Always ensure to remove the kettle from the base before pouring.

- When the water has boiled (without using the keep warm cycle) the kettle will enter standby mode and its display will turn off approximately 30 seconds. To wake the appliance, press any button.

Using the "+" "-"key, you can choose the temperature what you want, but after choose the temperature, you need press the "START/CANCEL" key to start the kettle, otherwise, the kettle will not start working. "+"key can add the temperature only, "-"key can subtract the temperature only.

the 40°C, 60°C can keep warm for four hours, 90°C can keep warm for two hours.

BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the function of boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a damp cloth or cleaner, never use a poisonous cleaner.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the kettle.

3. When not use or storage, the power cord may be wound under the power base.
4. The kettle must keep water higher than min level especially when you pour off water every time for that the unit with memory function, that would be danger if the kettle in "keep warm"

REMOVAL OF MINERAL DEPOSITS

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Then discard the mixture in the kettle, then filling the kettle with clean water to the maximum position, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipment to an appropriate waste disposal center.

WARRANTY FOR REPAIR & SERVICES

This product comes with a warranty of TWO YEARS on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 2106 520/1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

BOROSIL®

WARRANTY CARD

**THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE**

MODEL CODE : **BKE07**

CUSTOMER'S NAME : _____

ADDRESS : _____

PHONE NO. RESIDENCE : _____ OFFICE : _____

DATE OF PURCHASE & BILL NO. : _____

DEALER NAME & SIGN : _____

CUSTOMER'S SIGNATURE : _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, Crescenzo, G-Block, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 2106 520/1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm