

SUPER JUMBO 180° GRILL

makes the most deliciously grilled sandwiches

BOROSIL[®]

Performs Beautifully



USER MANUAL

BGRILLSS12

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL SUPER JUMBO 180° GRILL!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

- Use only. 230V, 50Hz AC power supply.
- Do not use outdoors or for commercial purposes. (Only for household use).
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the appliance by yourself. Contact Borosil Customer Care Toll Free No. **1800 224 552** or **myborosil@borosil.com** for examination and repair.
- Do not touch hot surfaces. Use handles. Do not move the appliance while it is plugged in. Allow the product to thoroughly cool before handling it.
- Unplug from outlet when not in use and before cleaning.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Do not plug or unplug the product into/from an electrical outlet with a wet hand.
- Use the appliance in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the appliance to allow adequate air circulation.
- Do not place the appliance on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
- Do not leave the appliance unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Before using, place the appliance on an even, stable surface heat-resistant surface; operate according to the instructions given.
- Keep the Oil drip collector tray dry and clean after use.
- Use this appliance only for its intended use, as described in this manual. Do not use any accessory attachment which is not provided in the product packing box.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its power cord out of reach to the children.

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS:

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING:

 
Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD:

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.

PART IDENTIFICATION

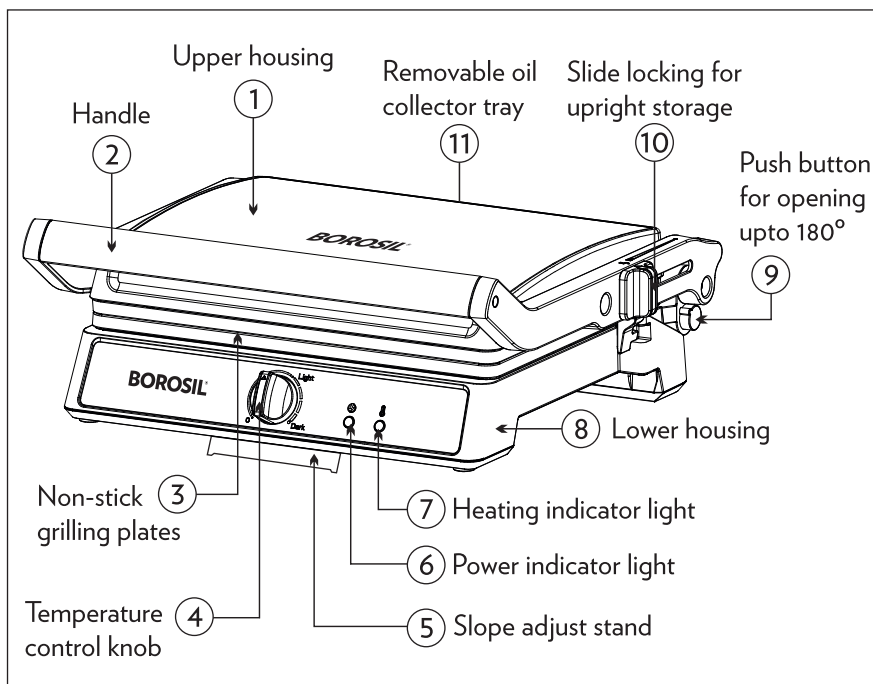

TECHNICAL DATA

- Specifications : 2000 W, 230V ~ 50Hz

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

Notice: When your SUPER JUMBO 180° GRILL is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

CLEANING

- Before cleaning, unplug and wait for the appliance and the plates to cool down.
- Wipe outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enters the cooling slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Do not immerse in water or any other liquid.

HOW TO USE

1. Before using this product for the first time, clean it as described in the “Cleaning” section.
2. Press in the end of the locking latch nearest to the handle to unlock the product.
3. Open the unit by pulling the handle up.
4. Close the plates and turn the unit on by plugging it into a standard electrical outlet. Check that the power indicator turns red.

WARNING : The cooking plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the handle.

5. After the unit preheats for approximately five minutes, the green heating indicator light will turn off indicating the product is ready for use.

CAUTION : Do not use this product to cook or defrost frozen food. Food must be completely defrosted before cooking it with this product.

6. Use the handle to lift the upper plate. Place food on the lower plate using wooden or plastic heat-resistant spatula.

 
CAUTION : Do not use metal spatula on this product, as it will scratch and damage the plates’ non-stick coating.

7. Lower the handle to rest the upper plate on top of the food.
8. Set the Sandwich Maker Temperature Control to your desired setting. At first, try a setting in the max. You may later adjust it lower or higher according to your preference.

NOTES:


- The cooking time for different food depends on the type and thickness of the food.
 - Food should be cooked thoroughly before consumption.
9. When the food is cooked as desired, lift the handle to open the plates, then remove the food using the spatula. If further cooking has to be done, close the plates to conserve heat.
 10. Repeat steps 7-10 until all cooking is complete, reapplying cooking oil as necessary.
 11. Turn off the product by unplugging the power cord from the electrical outlet.
 12. When the unit has completely cooled, clean and dry it.
 13. Lock the unit in its closed position by pressing in the end of the locking latch farthest from the handle.

TO USE AS OPEN GRILL

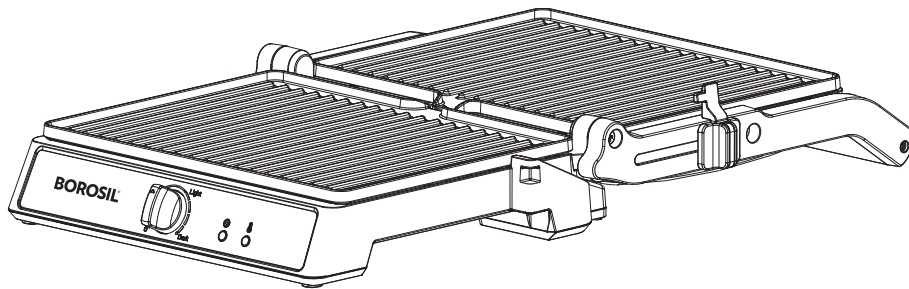

180° opening angle

 - Place Sandwich Maker on a clean flat surface where you intend to cook. The Sandwich Maker can be positioned in flat position.
- Upper plate/cover is in level with lower plate/base. The upper and lower plates line up to create one large cooking surface. To position the Sandwich Maker in this way, press the red push button on the right arm bottom.
- With your left hand on the handle, use your right hand to press the red button. Push the handle back until the cover rests flat on the counter. The unit will stay in this position until you lift the handle and cover to return it to the closed position.
- Use the Sandwich Maker as an open grill to cook burgers, steak, poultry (we do not recommend cooking bone-in chicken, since it does not cook evenly on an open grill), fish and vegetables.
- Cooking on the open grill is the most versatile method of using the Sandwich Maker. In the open position, you have double the surface area for grill.
- You have the option of cooking different types of foods on separate plates without combining their flavors, or cooking large amounts of the same type of food. The open position also accommodates different cuts of meat with varying thicknesses, allowing you to cook each piece to you liking.

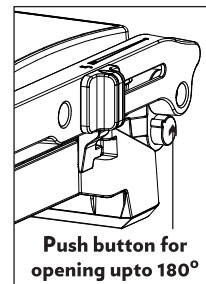

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations:

hand in the non-working electrical equipments to an appropriate waste disposal center.

WARRANTY FOR REPAIR AND SALES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD		BOROSIL®
THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED BY THE DEALER ON THE DATE OF PURCHASE		
MODEL CODE :	BGRILLSS12	
CUSTOMER'S NAME :		
ADDRESS :		
PHONE NO. RESIDENCE :	OFFICE :	
DATE OF PURCHASE & BILL NO. :		
DEALER NAME & SIGN :		
CUSTOMER'S SIGNATURE :		
DEALER'S STAMP		

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm