

JUMBO 180° GRILL

makes the most tasty grill

BOROSIL[®]

Performs Beautifully



USER MANUAL
BSM02



READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL JUMBO 180° GRILL SANDWICH MAKER!


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

- Use only. 230V, 50Hz AC power supply.
- Do not use outdoors or for commercial purposes. (Only for household use).
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the appliance by yourself. Contact Borosil Customer Care Toll Free No. **1800 224 552** or **myborosil@borosil.com** for examination and repair.
- Do not touch hot surfaces. Use handles. Do not move the appliance while it is plugged in. Allow the product to thoroughly cool before handling it.
- Unplug from outlet when not in use and before cleaning.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Do not plug or unplug the product into/from an electrical outlet with a wet hand.
- Use the appliance in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the appliance to allow adequate air circulation.
- Do not place the appliance on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
- Do not leave the appliance unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Before using, place the appliance on an even, stable surface heat-resistant surface; operate according to the instructions given.
- Keep the Oil drip collector tray dry and clean after use.
- Use this appliance only for its intended use, as described in this manual. Do not use any accessory attachment which is not provided in the product packing box.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its power cord out of reach to the children.

PARTS IDENTIFICATION

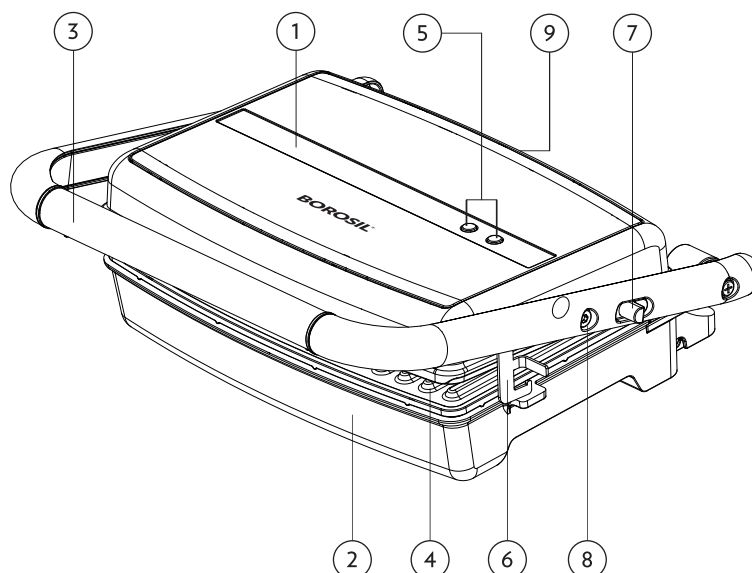

PART IDENTIFICATION:

1. Upper Housing
2. Lower Housing
3. Cooltouch Handle
4. Non-stick Grilling Plates
5. Power On & Heating Indicator Light
6. Clip-locking for upright storage
7. Slide button for opening upto 180°
8. Floating Hinge
9. Detachable oil drip collector tray

TECHNICAL SPECIFICATIONS

Product	: SANDWICH MAKER
Model Name	: JUMBO 180° GRILL
Item Code	: BSM02
Rated Voltage	: 230VAC
Rated Frequency	: 50Hz
Rated Power	: 1500W
Household Use Only	

BEFORE USING YOUR SANDWICH MAKER

- Read all instructions carefully and keep them for future reference.
- Peel off any plastic materials and packaging materials, and check that the cooking plates are clean and free of dust.
- If necessary, wipe over with a damp cloth.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray. This will assist in the removal of the Sandwiches after cooking results.
- Spread over with an absorbent kitchen towel and wipe off any excess oil.

Note: When your JUMBO 180° GRILL is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

1. Before using this product for the first time, clean it as described in the "Cleaning" section.
Note: Ensure the drip tray is correctly inserted into the unit to catch the excess fat and grease drippings.
2. Slide in the end of the locking latch towards the front handle to unlock the product.
3. Open the unit by pulling the handle up.
4. Close the plates and turn the unit on by plugging it into a standard electrical outlet. Check that the power indicator turns red.
3. Plug the cord into a 230VAC/ 50 Hz only outlet. Once plugged in, the red indicator light will come on.
4. Keep the Jumbo 180° Grill in the closed position while it is preheating. When the correct temperature has been reached, the green indicator light will turn off.
5. Place prepared sandwiches or snacks on the bottom cooking plate, near the back of the Jumbo 180° Grill.
6. Close the Jumbo 180° Grill by pulling down the handle of the top cooking plate. The top cooking plate will press down on the sandwich evenly because of its specially designed hinge. There is no need to press down on the handle, as the weight of the top cooking plate will gradually press it down as required.
Note: Do not use the latch to lock down the two cooking plates. This is to be used for storage purposes only.
7. Grilling will take a few minutes, depending on the type of bread and filling you're using. Check your sandwich often to ensure it is being grilled to your liking.
8. When your sandwich is ready, use a plastic or wooden spatula to remove it from the Jumbo 180° Grill. Do not use metal utensils, as they will damage the non-stick surface of the cooking plates.



CAUTIONS

- The cooking plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the handle. Do not use this product to cook or defrost frozen food. Food must be completely defrosted before cooking it with this product.
- When the sandwich starts cooking, initially steam will start coming out. This is normal.
- Do not use metal spatula on this product, as it will scratch and damage the plates' non-stick coating.

TIPS FOR MAKING GREAT SANDWICHES AND SNACKS

- Most kinds of breads can be used in your Jumbo 180° Grill. Try experimenting with different types, like raisin bread, pita breads or focaccia. Note that breads with a higher sugar content such as raisin bread and brioche will brown faster than regular breads.
- Because of the non-stick surface of the cooking plates, using butter or margarine on the outside of your sandwiches is optional, which will make for a healthier snack.
- Grilled sandwiches will be hot. To avoid burns, allow fillings to cool for several minutes before eating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- If you'd prefer to enjoy your grilled snack later, simply place it in an ovenproof dish and keep it warm in a 200°F (100°C) oven.

USE YOUR JUMBO 180° GRILL TO GRILL CHICKEN AND VEGGIES

You may use your Jumbo 180° Grill to cook boneless chicken or poultry, burgers, fish and seafood as well as vegetables. Cooking on your grill is a quick and healthy cooking method as you are grilling the top and bottom of food at the same time, while the ribs in the angled grill plates allow grease and unwanted fat to drip away from the chicken and drain from the plates.

TIPS FOR MARINATING

- For easy clean-up, marinate foods in resalable plastic bags.
- **Chicken and poultry:** Follow instructions in recipe or on label of bottled marinades for marinating time. In general, marinate chickens and poultry for 30 minutes to 1 hour at room temperature. Refrigerate food covered for longer periods; return to room temperature before cooking.
- **Fish and seafood:** Cover and marinate in the refrigerator for 15-30 minutes. The texture of fish and seafood will change if marinated for too long.
- Brush oil/butter onto foods during the last 5-10 minutes of cooking.
- Reserve some marinade to be used as a sauce before using the remainder to marinate food.
- Always discard leftover marinade.

PRACTICE SAFE FOOD HANDLING

- Be sure to wash hands before, during, and after cooking.
- Always wash hands, knife and board after handling raw fish, chicken or poultry.
- Do not reuse a board on which raw chicken was prepared - always use a clean board for cooked chicken.


NOTE: This unit is for use with boneless chicken only.

TO USE AS OPEN GRILL



180° Opening Angle

- Place Sandwich Maker on a clean flat surface where you intend to cook. The Sandwich Maker can be positioned in flat position.
- Upper plate/cover is in level with lower plate/base. The upper and lower plates line up to create one large cooking surface. To position the Sandwich Maker in this way, slide the black button on the right arm bottom towards front handle.
- With your left hand on the handle, use your right hand to slide the black button. Slide the handle back until the cover rests flat on the counter. The unit will stay in this position until you lift the handle and cover to return it to the closed position.
- Use the Sandwich Maker as an open grill to cook burgers, poultry (we do not recommend cooking bone-in chicken, since it does not cook evenly on an open grill), fish and vegetables.
- Cooking on the open grill is the most versatile method of using the Sandwich Maker. In the open position, you have double the surface area for grill.
- You have the option of cooking different types of foods on separate plates without combining their flavors, or cooking large amounts of the same type of food. The open position also accommodates different shapes of food with varying thicknesses, allowing you to cook each piece to your liking.

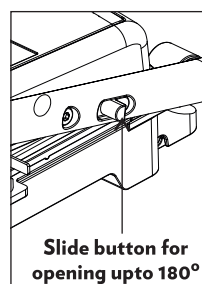

STORAGE

- Always unplug the appliance before storage.
- Always make sure the appliance is cool and dry, and the handle is locked before storing.

CLEANING YOUR JUMBO 180° GRILL

1. Unplug the unit and allow it to cool down slightly before cleaning. It may be easier to clean the plates when they are slightly warm.
2. Use the scraping tool to remove any leftover food from the cooking plates. The scraping tool can be washed in warm, soapy water or in the top rack of the dishwasher.
3. Wipe the cooking plates with a soft, damp cloth. If there is any leftover cooked-on food, reheat the unit for a couple of minutes and brush on a little bit of oil. Let this stand for a few minutes before trying again with the damp cloth.

NOTE: Do not use abrasive scouring pads or harsh cleaners on any part of the unit. If necessary, use a nylon bristle brush or plastic scrubbing pad.

4. Empty the contents of the drip tray. The drip tray can be washed in warm, soapy water or in the top rack of the dishwasher.
5. The housing of the unit can be wiped clean with a soft, damp cloth.
WARNING: Do not immerse the Jumbo 180° Grill, cord or plug in water or any other liquid.
6. To store your Jumbo 180° Grill, allow the unit to cool completely, then close and lock it together by sliding the latch on the side of the handle to the locked position.

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS:

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING:

Improper use of the grounding wire may result in an electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD:

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal centre.

WARRANTY FOR REPAIR & SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or Borosil Authorized Service Centre and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product is used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE

MODEL CODE : BSM02

CUSTOMER'S NAME :

ADDRESS :

PHONE NO. RESIDENCE : OFFICE :

DATE OF PURCHASE & BILL NO. :

DEALER NAME & SIGN :

CUSTOMER'S SIGNATURE :

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm