

## PRIME GRILL SANDWICH MAKER

makes the most tasty grill

# BOROSIL<sup>®</sup>

Performs Beautifully



## USER MANUAL

BGRILLPS11

---

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

---

# INTRODUCTION

Congratulations on your purchase of  
**BOROSIL PRIME GRILL SANDWICH MAKER!**

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

**Read all instructions before using the product.**

- Use only on 230VAC/ 50 Hz. For household use only.
- Do not touch hot surfaces. Use handles.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Do not use outdoors or for commercial purposes. (For household use only)
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the product by yourself. Contact Borosil Customer Care Toll Free No. **1800 224 552** or **myborosil@borosil.com** for examination and repair.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting or taking off parts, and before cleaning appliance.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Do not operate the appliance for any other than its intended use.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- To disconnect, remove plug from wall outlet, when finished using.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

## CONSUMER SAFETY INFORMATION

### **GROUNDING INSTRUCTIONS:**

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

### **WARNING:**


Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

### **POWER CORD:**

A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the bottom of the unit.

## PARTS IDENTIFICATION

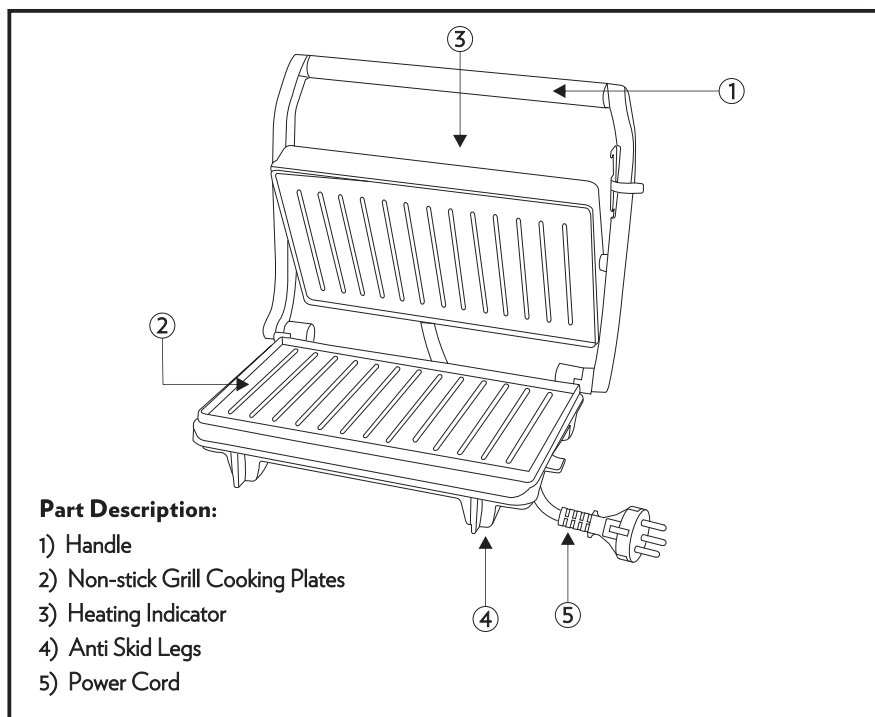

## TECHNICAL SPECIFICATION

Specifications : 700 W, 230V~50Hz

### BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging
- Clean the nonstick cooking plates by wiping a sponge or cloth dampened in warm water.

### DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

**Notice:** When your Prime Grill Sandwich Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance. It goes off after few usages.

## HOW TO USE

1. Place your Prime Grill Sandwich Maker on a dry, flat, level surface, such as a counter top or table. Be sure that the sides, back and top of the unit are at least 4 inches (10 cm) away from any walls, cabinets or other objects on the counter or table.
2. Plug the cord into a 230 V/ 50 Hz-AC only outlet. Once plugged in, the red indicator light will come on.
3. Keep the Prime Grill Sandwich Maker in the closed position while it is preheating. When the correct temperature has been reached, the red indicator light will turn off.
4. Place prepared sandwiches or snacks on the bottom cooking plate, near the back of the Prime Grill Sandwich Maker.
5. Close the Prime Grill Sandwich Maker by pulling down the handle of the top cooking plate. The top cooking plate will press down on the sandwich evenly because of its specially designed hinge. There is no need to press down on the handle, as the weight of the top cooking plate will gradually press it down as required. Do not use the latch to lock down the two cooking plates. This is to be used for storage purposes only.
6. Grilling should take a few minutes, depending on the type of bread and filling you're using. Check your sandwich often to ensure it is being Grilled to your liking.
7. When your sandwich is ready, use a plastic or wooden spatula to remove it from the Prime Grill Sandwich Maker. Do not use metal utensils, as they will damage the non-stick surface of the cooking plates.

## TIPS FOR MAKING GREAT SANDWICHES AND SNACKS

- Most kinds of breads can be used in your Prime Grill Sandwich Maker. Try experimenting with different types, like raisin bread, pita breads or focaccia. Note that breads with a higher sugar content such as raisin bread and brioche will brown faster than regular breads.
- Because of the non-stick surface of the cooking plates, using butter or margarine on the outside of your sandwiches is optional, which will make for a healthier snack.
- Grilled sandwiches will be hot. To avoid burns, allow fillings to cool for several minutes before eating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- If you'd prefer to enjoy your grilled snack later, simply place it in an ovenproof dish and keep it warm in a 200°F (100°C) oven.

## CLEANING YOUR PRIME GRILL SANDWICH MAKER

1. Unplug the unit and allow it to cool down slightly before cleaning. It may be easier to clean the plates when they are slightly warm.
2. Use the scraping tool to remove any leftover food from the cooking plates. The scraping tool can be washed in warm, soapy water or in the top rack of the dishwasher.
3. Wipe the cooking plates with a soft, damp cloth. If there is any leftover cooked on food, reheat the unit for a couple of minutes and brush on a little bit of oil. Let this stand for a few minutes before trying again with the damp cloth.

**NOTE:** Do not use abrasive scouring pads or harsh cleaners on any part of the unit. If necessary, use a nylon bristle brush or plastic scrubbing pad.

4. The housing of the unit can be wiped clean with a soft, damp cloth.

**WARNING:** Do not immerse the Prime Grill Sandwich Maker, cord or plug in water or any other liquid.

5. To store your Prime Grill Sandwich Maker, allow the unit to cool completely, then close and lock it together by sliding the latch on the side of the handle to the locked position. Your Prime Grill Sandwich Maker can now be stored.

## ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations:

Hand in the non-working electrical equipments to an appropriate waste disposal center.

## WARRANTY FOR REPAIR AND SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

**The warranty is not valid in case:**

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD		BOROSIL®
THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED BY THE DEALER ON THE DATE OF PURCHASE		
MODEL CODE:	BGRILLPS11	
CUSTOMER'S NAME:		
ADDRESS:		
PHONE NO. RESIDENCE:		OFFICE:
DATE OF PURCHASE & BILL NO.:		
DEALER NAME & SIGN:		
CUSTOMER'S SIGNATURE:		
DEALER'S STAMP		

# BOROSIL®

## CORPORATE OFFICE :

### BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.  
Website: [www.borosil.com](http://www.borosil.com) | Customer Care Toll Free No.: 1800 224 552  
Email id: [myborosil@borosil.com](mailto:myborosil@borosil.com) | Tel: 022 6740 6300 | Fax: 022 6740 6514  
CIN NO.: L36100MH2010PLC292722

## SALES OFFICE :

### MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,  
Kurla (W), Mumbai - 400 070.  
Tel.: 022 6740 6400 | Fax: 022 6740 6444  
email: [mumbaisales@borosil.com](mailto:mumbaisales@borosil.com)

### DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.  
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689  
email: [delhi@borosil.com](mailto:delhi@borosil.com)

### CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.  
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014  
email: [borosilmso@ethnet](mailto:borosilmso@ethnet) / [chennai@borosil.com](mailto:chennai@borosil.com)

### KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.  
Tel.: (033) 2229-9166, 2226-2045  
email: [calcutta@borosil.com](mailto:calcutta@borosil.com)

### GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,  
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at [www.myborosil.com](http://www.myborosil.com)

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm