

SMARTBLEND HB03 HAND BLENDER

Makes meal preps quick and smooth

BOROSIL®

Performs Beautifully



IS: 302-2-14



CM/L - 8700096015



USER MANUAL BHB03

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL SMARTBLEND HB03 HAND BLENDER!


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

1. Use only with 230 V DC/ 50 Hz power supply.
2. Do not use outdoors or for commercial purposes. This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.
3. Do not operate any appliance with a damaged cord or plug or others parts are damaged or which has been malfunctioned or has been damaged any manner. In order to avoid the risk of electric shock, never try to repair the Hand Blender yourself. Contact your local dealer or **Borosil Authorized Service Centre or Borosil Customer Care Toll Free No. 1800 224 552/1800 210 6520.**
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
6. Do not let power cord hang over the edges of the table or counter, or touch hot surface & Do not immerse cord, plug or motor unit of the appliance into the water as may cause electric shock.
7. The appliance should not be used for blending hard and dry substance, otherwise the blade may become blunt and damaged.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Be sure to turn off the main switch after each use. Make sure the motor stops completely.
10. Before turning ON, make sure the blade is properly fixed with the blade unit.
11. Do not operate the appliance for any other than its intended use.
12. Take care of potential injury from misuse.
13. Close supervision is necessary when your appliance is being used near children or infirm persons.
14. Keep hands out of container while blending to reduce the risk of severe injury to persons or damage to the blender.
15. The use of accessories not recommended by the company may cause injuries.
16. If one of the blade unit gets stuck, unplug the appliance before you remove the ingredients that get blocked below the blades.
17. Never operate on ingredients that are very hot, or allow them to cool first.

DESCRIPTION OF THE PRODUCT

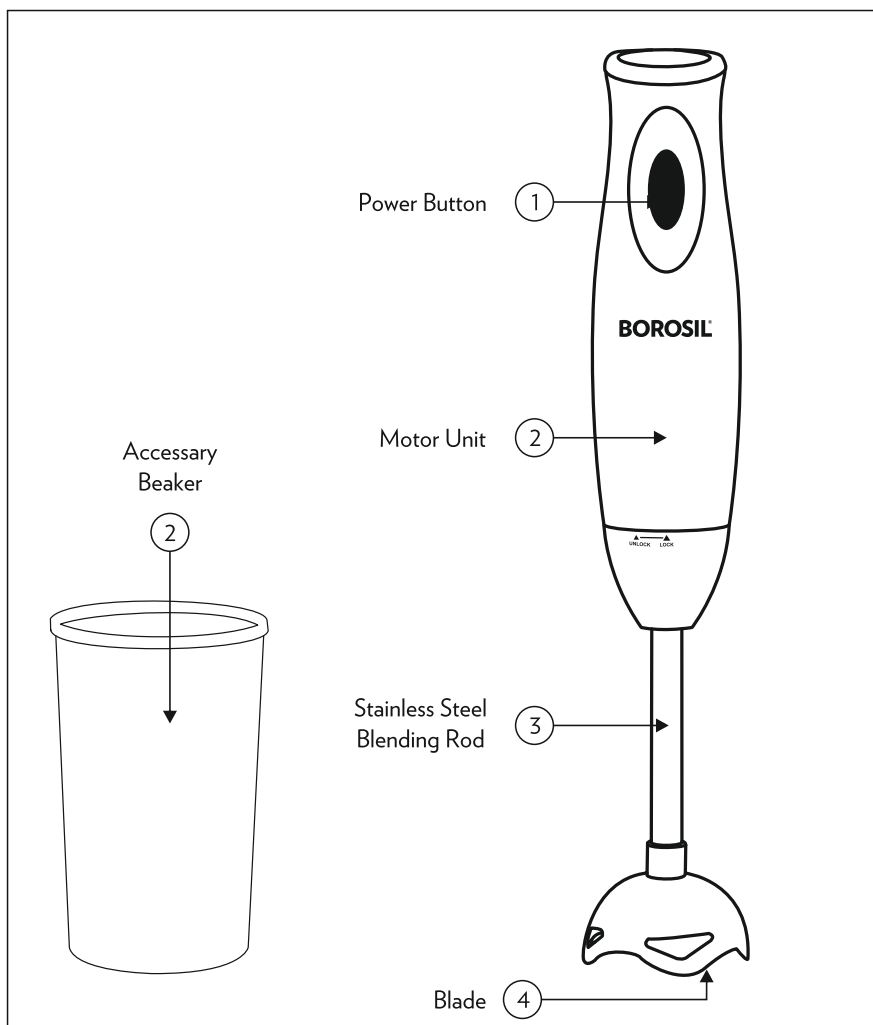

TECHNICAL SPECIFICATIONS

Product	: HAND BLENDER
Model Name	: SMARTBLEND HB03
Item Code	: BHB03
Rated Voltage	: 300V DC
Rated Frequency	: 50Hz ☐
Rating	: 3 min. on & 10 Min. off
Household Use Only Do not immerse in water	

BEFORE USING YOUR ELECTRIC HAND BLENDER

- Read all instructions and important safeguards included in this manual
- Remove all packing material
- Clean the blender according to the section of "Cleaning and Maintenance"
- Thoroughly clean the parts that will come into contact with food
- Make sure all parts are completely dry
- Let hot ingredients cool down (only for blending hot food item)
- Always unwind the power cord completely before you switch on the appliance.
- In the initial stage of using there will be a varnish smell from the Hand Blender and this goes off after few usages. This is normal with appliance. This does not affect the safety of your appliance.

HOW TO USE

Cautions:

- Do not process ingredients such as ice cubes, frozen ingredients or fruits with seeds. The hand blender is intended for: blending fluids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes. - mixing soft ingredients, e.g. pancake batter or mayonnaise. pureeing cooked ingredients, e.g. for making baby food.
- The time of running unit without load should not exceed 15 seconds
- Maximum operation duration per continuous blending cycle should not exceed 1 minute. 3 minute rest time must be maintained between two consecutive cycles.
- Blades are very sharp, handle with care. Ensure that the hand-held blender is unplugged from the power outlet before assembling or removing attachments.
- To assemble the detachable blade with the blade unit, turn the shaft anti-clockwise direction until tightened. To disassemble, just turn in the reverse direction

For Blending/Mincing & Whipping:

1. Attach the blending blade to the blending rod
2. Plug the blender to the power outlet
3. Immerse the blade guard completely in the ingredients in order to avoid splashing
4. Press and hold the button to start the blender
5. Move the blender slowly up and down and in circles to blend the ingredients
6. Release the button to stop the blender
7. After you have finished blending, unplug the appliance.

CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the detachable rod.

Note : Do not immerse the detachable rod of the blender in water because after continual use the lubrication on the bearings may wash away.

2. Wash the detachable rod under running water, without the use of abrasive cleaner or detergents. After cleaning the detachable rod, place it upright so that any water which may have got in, can drain out.
3. Wash the blade in warm soapy water.
4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as an electric shock may occur.
5. Dry thoroughly.
6. Reassemble the detachable rod to motor unit.

Caution: Blades are very sharp, handle with care.

Quick Cleaning:

Hold the Hand Blender with the attachment in a bowl half filled with water and turn ON the motor for a few seconds in between processing the next task.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal center.

WARRANTY FOR REPAIR AND SERVICES

This product comes with a warranty of ONE YEAR on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll Free No. **1800 224 552/1800 210 6520** or **e-mail us at myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use).
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired.
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE

MODEL CODE : **BHB03**

CUSTOMER'S NAME : _____

ADDRESS : _____

PHONE NO. RESIDENCE : _____ OFFICE : _____

DATE OF PURCHASE & BILL NO. : _____

DEALER NAME & SIGN : _____

CUSTOMER'S SIGNATURE : _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, Crescenzo, G-Block, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552/1800 210 6520
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm