

ELECTRIC PLUS EGG BOILER

Delicious eggs, just the way you like them

BOROSIL®

Performs Beautifully



USER MANUAL BEB02

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

Close size- 4.25 x 5.5 inch

— |

| —

— |

| —

INTRODUCTION

Congratulations on your purchase of
BOROSIL ELECTRIC PLUS EGG BOILER!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precaution should always be followed including the ones mentioned below:

READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT

1. Use only with 230V ~ 50Hz power supply.
2. Do not use outdoors or for commercial purpose. This appliance is intended for household use only.
3. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
4. **Power Cord:**
 - When removing the plug from the wall socket never pull on the power cord.
 - Do not let the power cord hang over the edges of the table or counter, or touch hot surface. Never wrap the cord tightly around the appliance
 - Do not immerse cord, plug or base of the appliance into the water as it may cause electric shock.
 - Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
 - Do not plug or unplug the product into/from an electrical outlet with a wet hand.
5. Do not operate the appliance for any other than its intended use.
6. This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its power cord out of reach to the children.
8. Do not touch any part of the egg boiler when boiling, to prevent from scalding.
9. Be cautious about the steam from the steam hole so as to prevent yourself getting scald.
10. Do not touch the heating plate. Doing so might result in an injury.
11. Avoid injuries by the egg needle

12. Do not operate the appliance with a damaged cord or plug or any other part which has been malfunctioned or has been damaged any manner. In order to avoid the risk of electric shock, never try to repair the appliance yourself. Contact your local dealer or Borosil Authorized Service Centre or Borosil Customer Care, Toll free no **1800 224 552**.
13. Do not move the appliance while it is plugged in.
14. Do not turn on the appliance without closing the top lid.
15. Do not use it in your absence.
16. Operate according to the instructions given in "How to use" section.

SAVE THESE INSTRUCTIONS

BEFORE USING YOUR EGG BOILER

Before using your egg boiler for the first time, be sure to:

1. Read all instructions and important safeguards included in this manual.
2. Make sure the appliance is unplugged. Take care against getting hurt by any sharp edge.
3. Remove all the accessories. Wash them in hot sudsy water. Avoid injuries by the egg needle.
4. Thoroughly dry all accessories and re-assemble in the egg boiler. Make sure the appliance is completely dry before using it.
5. Place the appliance on an even, stable surface
6. Keep the appliance at least 6" (152 mm) away from the walls for proper ventilation.
7. For the first time, pour maximum water and then plug the egg boiler into outlet.
8. Press ON Button, let the water boil and discard the residual water. Post this step, you are ready to use your new **ELECTRIC PLUS Egg Boiler**.

DESCRIPTION OF PRODUCT




TECHNICAL SPECIFICATIONS

Product	: Egg Boiler	Rated Frequency	: 50Hz
Model Name	: ELECTRIC PLUS	Rated Power	: 500W
Item Code	: BEB02	Capacity	: 8 Eggs
Rated Voltage	: 230VAC	Household Use Only	

CAUTIONS WHILE OPERATING

- Do not cover the top lid with any cloth or plate which might prevent steam to come out
- Do not add water directly when the water on the plate has evaporated, first pull out the plug
- Always use a cloth to open the hot lid
- Ensure that the 'ON/OFF' switch is free of obstructions and the lid is firmly closed.
- Put the steamed egg into cold water to make it easier to open the shell and more delicious to taste.

HOW TO BOIL

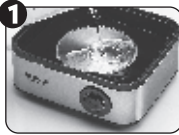

Pour water onto the heating plate as required:

- Increase or decrease the quantity of water as per your boiling preference - Hard, Medium or Soft. (Below tables are for reference only and you can make adjustments according to your experience)

For 8 EGGS, Softness vs Time

EGG TYPE	WATER QUANTITY	TIME
SOFT	55 ml	8 MINUTES
MEDIUM	85 ml	10 MINUTES
HARD	120 ml	13 MINUTES



Place the eggs on the tray and close the top lid:

- To avoid crack, you may pierce several small holes on the blunt end of the egg with the egg needle at the bottom of the measuring cup and then put the small part on the tray.
- For proper boiling, make sure the top lid is properly fitted & closed.




Press the 'On/Off' button:

- Plug in the appliance and press the 'ON/OFF' Button. The Indicator light will switch ON.



Egg boiler will shut down automatically:

- Once the water evaporates, the egg boiler will shut down automatically, giving you the desired eggs. Now unplug the appliance. Allow the appliance to cool sufficiently before handling it.
- It is recommended to press the 'ON/OFF' button to bring it back to off position.
- To use the appliance again you need to wait for a short cool down time.

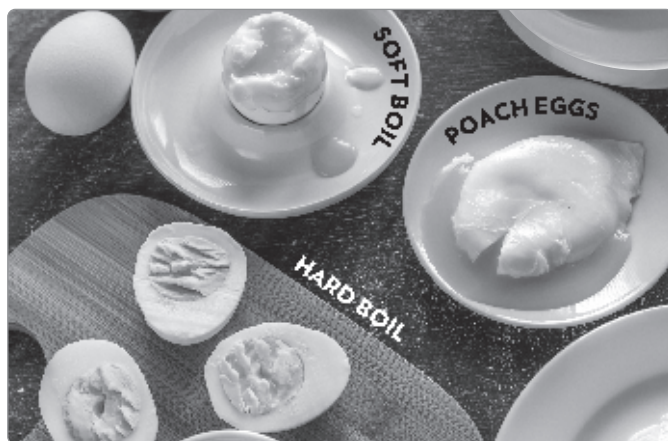

HOW TO MAKE POACHED EGGS / STEAM FOOD

- 1 Pour water onto the heating plate as required:** (Below tables are for reference only and you can make adjustments according to your experience)

FUNCTION	WATER QUANTITY	TIME
POACH / STEAM	140 ml	14 MINUTES

- 2 Place the food on the poaching tray and close the top lid:**

- Poaching tray can be used to make poached eggs, steam other food, etc.
- Please do not put the poaching tray on the heating plate directly when making poached eggs or steaming food.
- Always put the poaching tray on the egg tray.
- For proper steaming, make sure the top lid is properly fitted & closed.

- 3 Press the 'On/Off' button:**

- Plug in the appliance and press the 'ON/OFF' Button. The Indicator light will switch ON.

- 4 Appliance will shut down automatically:**

- Once the water evaporates, the appliance will shut down automatically. The Indicator light will switch OFF. Now press the 'ON/OFF' Button to bring it back to off position. Now unplug the appliance. Allow the appliance to cool sufficiently before handling it.
- To use the appliance again you need to wait for a short cool-down time.

ENHANCED SAFETY PROTECTION

Appliance switches off automatically when the eggs are done or in case of overheating.

CLEANING AND MAINTENANCE

1. Always disconnect the appliance from the power outlet and let it cool down completely before cleaning.
2. Never immerse the Egg Boiler or the power cord in water, or allow moisture to come in contact with these parts.
3. Wipe the appliance with a damp cloth or cleaner after every use.
4. To deodorize / descale, add a few drops of lemon on the heating plate and then clean it with a moist cloth.
5. When not in use, unplug it or store it in a dry ventilated place.

CAUTION: Do not use chemical, steel, wooden, abrasive or poisonous cleaners to clean the appliance as these will damage the finish.

TROUBLESHOOTING

TROUBLE	CHECKING THE REASON	SOLUTION
Indicator light does not work	Power failure	Wait for power to resume
	Whether the power cord is plugged in the socket	Firmly insert the plug to the socket
	Whether the socket power is on	Check on another socket
	Whether the ON/OFF button has been pressed yet	Press the ON/OFF button
	Else the light is defective	Switch Off the appliance and unplug it. Contact Borosil Customer Care Toll free no. 1800 224 552 or e-mail us at myborosil@borosil.com or contact your local dealer or Borosil Authorized Service Centre
Eggs are over or under done	Whether the water is too much or not enough	Add water in right quantity as indicated in the manual or adjust as per requirement
Eggs are raw/ No boiling	Check whether the Appliance is ON	Switch On the Appliance
	Else the heating element is defective	Switch Off the appliance and unplug it. Contact Borosil Customer Care Toll free no. 1800 224 552 or e-mail us at myborosil@borosil.com or contact your local dealer or Borosil Authorized Service Centre

WARRANTY FOR REPAIR AND SALES

This product comes with a warranty of One Year on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

BOROSIL®

WARRANTY CARD

**THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE**

MODEL CODE : BEBO2

CUSTOMER'S NAME : _____

ADDRESS : _____

PHONE NO. RESIDENCE : _____ OFFICE : _____

DATE OF PURCHASE & BILL NO. : _____

DEALER NAME & SIGN : _____

CUSTOMER'S SIGNATURE : _____

DEALER'S STAMP

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal center.

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbailesales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahaddammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on    Borosil And You

Back Cover - Close Size - 140 x 215 mm