

GLIDER 1000 W

Easy ironing, everyday

BOROSIL[®]

Performs Beautifully



IS : 366-1991



CML No. 4846278

SAFETY



IS : 302-2-3-2007
CML No. 4846177



USER MANUAL

BDI01

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

USER MANUAL - Close size - 98 (w) x 141.5 mm

INTRODUCTION


Congratulations on your purchase of
BOROSIL GLIDER 1000 W DRY IRON!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Use only on 230 V AC/ 50 Hz. For household use only
- Do not touch hot surfaces. Use handles
- During first usage, the iron may emit fumes. This is a normal occurrence, which should not cause undue concern
- Do not immerse the cord, plug or product in water or any other liquid to protect against risk of electric shock
- Do not use outdoors or for commercial purposes
(For household use only)
- Close supervision is necessary when the appliance is used by or near children. Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the product by yourself. Contact our Customer Care No. **1800 224 552** or **myborosil@borosil.com** for examination and repair
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces. Do not operate the appliance for any other than its intended use. This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance
- After usage, Unplug the iron from wall outlet and disconnect
- Do not leave the appliance unattended when switched on

DESCRIPTION OF PRODUCT

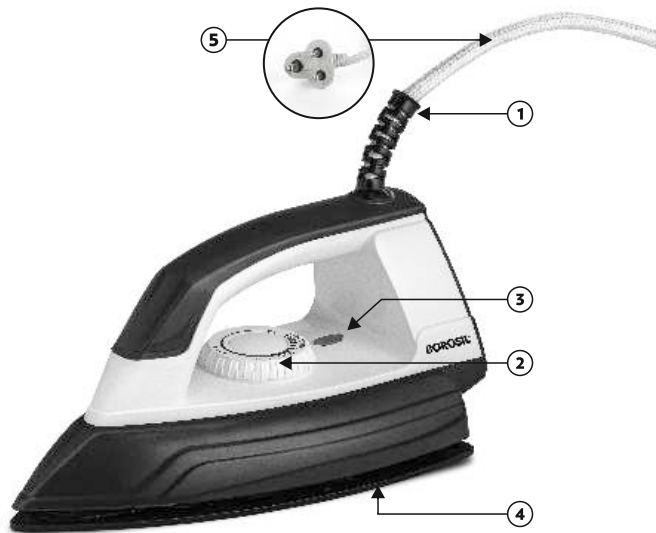

PART DESCRIPTION

- 1) Swivel cord
- 2) Temperature Setting Knob
- 3) Indicator lamp
- 4) Sole plate
- 5) Power cord

TECHNICAL DATA

- Rated Power Supply : 230V-50Hz
- Rated Power : 1000W

HOW TO USE

- Before the first use, check if the voltage rating on the base plate corresponds to the mains voltage at your home.
- Connect the plug to a standard domestic outlet.
- Rest the iron on its heel.
- Turn the temperature dial to the correct fabric selection.
- The thermostat light will glow indicating the iron is heating up.
- When the light goes off, the required temperature has been obtained.
- Remember, an iron heats up faster than it cools down. So start with cool fabric and work up to hotter fabric selection settings. If you turn a setting down, allow the temperature to adjust before continuing ironing.
- Unplug the iron from the electricity supply immediately after use. Unplug the iron by gripping the plug and pulling it from the outlet. Never pull on the cord from the socket.

CLEANING AND CARE

- Wipe thoroughly with a damp cloth or sponge.
- Never use abrasives, heavy duty cleansers, vinegar, scouring pads or sharp objects.
- Do not use metal scouring pads since they will scratch the coating on sole plate.
- After the iron is cool down completely, wind the cord around the storage wrap on the heel of the iron. Do not wind it too tightly as this may damage the iron.

NOTE

- Do not touch the sole plate while the iron is hot.
- Do not leave the iron unattended while connected to the electrical supply. Never immerse the dry iron in water.
- After Iron is switched off, the sole plate will still be hot for sometime. Do not touch or keep the plate on the cloth during this time

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS :

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING :

Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD :

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment !

Please remember to respect the local regulations : hand in the non-working electrical equipments to an appropriate waste disposal center.

WARRANTY FOR REPAIR AND SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or Borosil Authorized Service Centre and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

**THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE**

MODEL CODE: BDI01

CUSTOMERS NAME: _____

ADDRESS: _____

PHONE NO. RESIDENCE: _____ OFFICE: _____

DATE OF PURCHASE & BILL NO.: _____

DEALER NAME & SIGN: _____

CUSTOMER'S SIGNATURE: _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE:

BOROSIL LIMITED

1101, G-Block, Crescenzo, BKC, Bandra (East), Mumbai- 400 051, Maharashtra.
Website: www.myborosil.com | **Customer Care Toll Free No.:** 1800 224 552 / 1800 2106 520
Email id: myborosil@borosil.com | Tel.: 022 6740 6300 | Fax: 022 6740 6514
CIN No.: L36100MH2010PLC292722

SALES OFFICE:

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S Marg, Next to Kurla Bus Depot, Kurla (W),
Mumbai- 400 070. | Tel.: 022 6740 6400 | Fax: 022 6740 6444
email id: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi- 110 001.
Tel.: 011 2334 3897 | Fax: 011 2374 6689 | email id: delhi@borosil.com

CHENNAI:

NEW No. 20, (Old No. 9) 1st Floor, Brahadammal Road, Nungambakkam, Chennai- 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email id: borosilms@ethnet.com / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gilander House, Netaji Subhash Road, Kolkata, West Bengal- 700 001.
Tel.: 033 2229 9166 / 2226 2045 | email id: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhau, Ifcco Road, Sector- 18, Gurugram,
Haryana- 122 015. | Tel.: 0124 6926 333

BENGALURU:

Spatium South Park, 54, 1st Floor, 1st Main Rd, Sarakki Industrial Layout, Dollar Layout, 3rd Phase,
J. P. Nagar, Bengaluru, Karnataka 560078.
email id: bangalore@borosil.com

**GOT A SERVICE-RELATED QUERY OR
NEED CUSTOMER SUPPORT?**



SCAN THE QR CODE & PLACE YOUR
SERVICE REQUEST ON WHATSAPP 24 x 7
+91 7208487334



TOLL FREE NUMBER

**1800 224 552 /
1800 2106 520**



Shop online at www.myborosil.com | Follow us on [f](#) [@](#) [v](#) Borosil And You