

HANDHELD DIGITAL GARMENT STEAMER GS02

Steam away wrinkles and freshen up your clothes

BOROSIL[®]

Performs Beautifully



USER MANUAL

BHGS021

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulation on your purchase of
BOROSIL HANDHELD DIGITAL GARMENT STEAMER GS02 !

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the appliance.

- Use only. 230V, 50Hz AC power supply.
- Do not use the appliance outdoors or for commercial purposes. (Only for household use).
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the appliance by yourself. Contact Borosil Customer Care Toll Free No. **1800 2106 520/1800 224 552** or **myborosil@borosil.com** for examination and repair.
- Do not touch hot surfaces. Use handles. Do not move the appliance while it is plugged in. Allow the appliance to thoroughly cool before handling it.
- Unplug from outlet when not in use and before cleaning.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not put any stress on the power cord where it connects to the appliance as the power cord could fray and break.
- To avoid the risk of electric shock, do not immerse the cord, plug or steamer unit in water or any other liquid, nor rinse it under the tap.
- Do not plug or unplug the appliance into/from an electrical outlet with a wet hand.
- Do not leave the appliance unattended while it is in use.
- Use this appliance only for its intended use, as described in this manual. Do not use any accessory attachment which is not provided in the appliance packing box.
- Be careful of the steam generated by the Garment Steamer. Steam can cause burns.
- Before connecting the power appliances, please check if the voltage of the local power supply voltage match.
- If the plug, the cord or the appliance itself shows visible damage, or the appliance has been dropped or leaks, do not use the appliance again.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety.

- Do not touch the head of steam outlet and hot surfaces during use. When the appliance is in use, it will produce steam at high temperature. Do not use directly on people and animals, and do not steam the clothes while being worn on the body, to avoid the risk of scalding.
- Cleaning appliance before installing or removing the brush attachment or to the tank water, be sure to unplug the.
- Use only a grounded outlet.
- If the appliance is hot, it has been connected to the power supply when the appliance is placed do not let the steam nozzle in contact with any surface.
- During the appliance working, do not let the power cord and contact with high temperature steam.
- When the tank no water, do not use this appliance.
- When you leave short-term appliance, turn the appliance off and unplug it. While the garment steamer is in use, the power cord should not be in contact with anything hot.
- Do not operate the Garment steamer with an empty water tank.
- After ironing, be sure to disconnect the power plug, and allow it to cool for 60 minutes before cleaning the appliance, installing or removing attachments, emptying the water tank or storage.
- Do not use this appliance in the bathroom or the outdoors.
- Do not drag the appliance on the floor.
- Vapors may cause some damage to the wall or door or fade.
- By design, your appliance can be used with tap water. In case you live in a region where water quality is very hard, scale build-up can be very fast. You can use distilled water in such cases.
- Do not put perfume, vinegar, descaling agents, ironing aids or other chemicals into the tank, because this appliance is not made to handle these chemicals.


SAVE THESE INSTRUCTIONS.

BEFORE USING YOUR GARMENT STEAMER

- Read all instructions carefully and keep them for future reference.
- Peel off any plastic materials and packaging materials, and check that the appliance is clean and free of dust.
- If necessary, wipe over with a damp cloth.
- Remove any labels or protective cover, put straight before use and straighten the wire.
- First use the steamer to produce steam and wait for a few minutes. This will remove any odour caused due to the manufacturing process.
- To avoid a circuit overload, it is not recommended to use it in a common socket where other appliances is connected

Note: When your **Handheld Digital Garment Steamer GS02** is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

DESCRIPTION OF PRODUCT

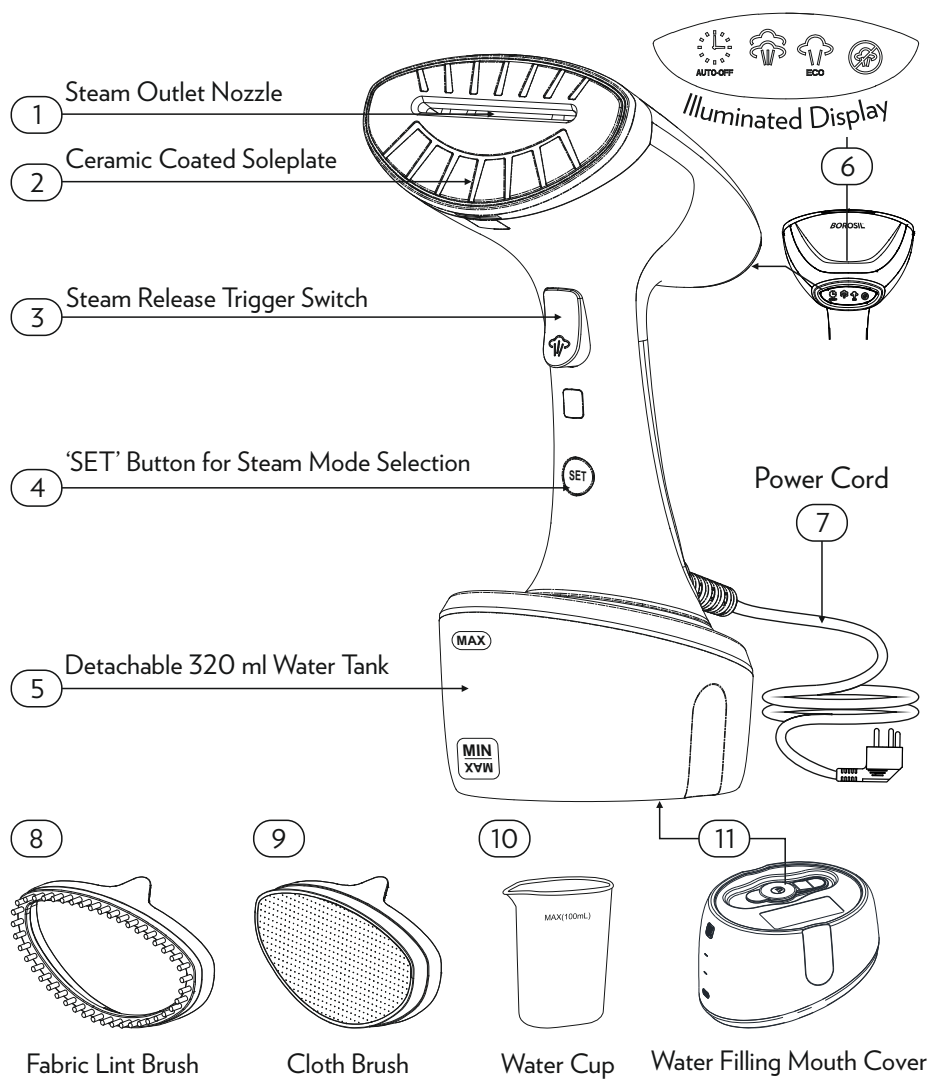

TECHNICAL SPECIFICATIONS:

Product : Garment Steamer	Rated Voltage : 230VAC
Model Name : Handheld Digital Garment Steamer GS02	Rated Frequency : 50Hz
Item Code : BHGS021	Household Use Only
Rated Power : 1600W	DO NOT IMMERSE IN WATER

HOW TO USE & INSTALL GARMENT STEAMER



1

Open the mouth cover and fill the tap water in to the water tank with the help of water cup.



2

Make sure the water cup filled to atleast one-third and do not exceed the maximum water level.



3

Fit the garment steamer unit to water tank, as shown on the water tank lock & unlock position



4

Hold the steamer handle at the other hand, then use the Fabric Lint Brush OR Cloth Brush attachment is to be mounted on the nozzle panel.



5

Put the steamer in a safe place and connect the plug into the power outlet.



6

Illuminates the display will turn ON then set the modes as per requires



1st level - Red light indicates Power ON



2nd level - Green light indicates for mild steaming



3rd level - Blue light indicates for strong steaming



4th level - Red light flickers for auto-shut off



7

When the steam start generating, the garment steamer is ready to use



IRONING WITH GARMENT STEAMER

Garment Steamer is very easy to use, suitable for ironing or removing wrinkles / folds of clothing, curtains, decorative fabrics and refreshing, on most of fabric can be used.

In order to get the most out of your garment steamer, the cloth must be hung on hangar or another support, vertically.

NOTE: Garment Steamer is designed to avoid the use of hot-linked when the garment is in a horizontal position.

- Make sure the fabric is of a quality where the steam can pass through easily.
- Check the laundry bag, ensure no items are in the pocket.
- Check the back of the garment, where there is likelihood of damage by steaming .
- Using the garment steamer on metal parts is not recommended as it may cause damage to the material.
- When the switch is pressed, you will feel a vibration and simultaneously hear a faint buzzing sound. This is normal.
- Please place the showerhead plate between the clothes and keep at least 5 cm distance.
- If the garment steamer buzz becomes loud, and no steam is being discharged, check the water level in the tank, and add water to the tank.
- Release the switch to stop the steam.



AFTER EACH USE

- Press the power switch or unplug the power cord from the power outlet.
- Remove the water tank, open the radiator pressure cap, and invert the water tank to empty it out.
- Place upright on a flat desktop, and wait for the product to cool.



CARE, CLEANING AND STORAGE

- Remove the brush head and then use a damp cloth to clean
- Do not use harsh or abrasive cleaners or solvents.
- Do not immerse the steamer in water or other liquids.
- Do not drop, throw or try to bend it.
- Do not attempt to disassemble appliances.
- After each use, empty the water tank.
- Do not place it near a heat source or direct sunlight.
- Always make sure the steam outlet is clean and the nozzle is not blocked.
- It is recommended to store the steamer vertically.

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS:

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING:

Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal centre.

WARRANTY FOR REPAIR AND SALES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 2106 520/1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or Borosil Authorized Service Centre and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product is used for commercial purpose (i.e. other than domestic use).
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired.
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

**THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE**

MODEL CODE: **BHGS021**

CUSTOMER'S NAME: _____

ADDRESS: _____

PHONE NO. RESIDENCE: _____ OFFICE: _____

DATE OF PURCHASE & BILL NO.: _____

DEALER NAME & SIGN: _____

CUSTOMER'S SIGNATURE: _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, Crescenzo, G-Block, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 2106 520/1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm