

# JUMBO 4-SLICE WAFFLE MAKER

make most delicious waffles

# BOROSIL<sup>®</sup>

Performs Beautifully



## USER MANUAL

BWM04

---

**READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

---

## INTRODUCTION

Congratulations on your purchase of  
**BOROSIL JUMBO 4-SLICE WAFFLE MAKER!**

 
## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precaution should always be followed including the following:**


### **READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT**

1. Use only with 230V ~ 50Hz power supply.
2. Do not use outdoors or for commercial purpose. This appliance is intended for household use only.
3. Do not operate any appliance with a damaged cord or plug or others parts are damaged or which has been malfunctioned or has been damaged any manner. In order to avoid the risk of electric shock, never try to repair the appliance yourself.
4. Contact your local dealer or Borosil Authorized Service Centre or Borosil Customer Care, Toll free no. **1800 224 550 / 1800 224 552.**
5. Do not touch hot surfaces. Use handles. Do not move the appliance while it is plugged in. Allow the product to thoroughly cool before handling it.
6. Unplug from outlet when not in use and before cleaning.
7. Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
8. Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
9. To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
10. Do not plug or unplug the product into/from an electrical outlet with a wet hand.
11. Use the appliance in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the appliance to allow adequate air circulation.
12. Do not place the appliance on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
13. Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
14. Do not leave the appliance unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
15. Before using, place the appliance on an even, stable surface heat-resistant surface; operate according to the instructions given.
16. Use this appliance only for its intended use, as described in this manual. Do not use any accessory attachment which is not provided in the product packing box.
17. This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its power cord out of reach to the children.

## PART IDENTIFICATION

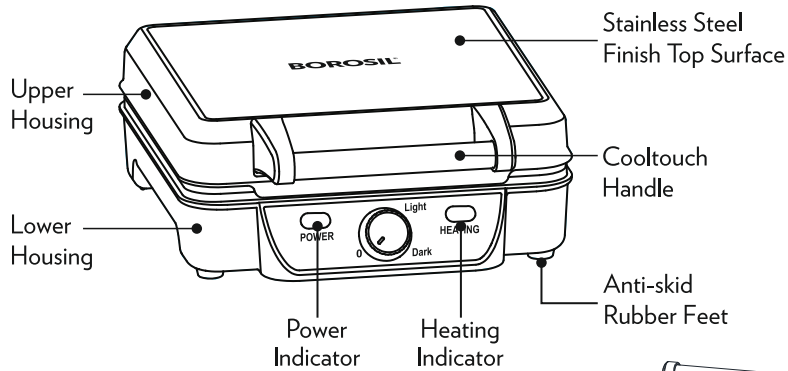

TECHNICAL SPECIFICATIONS	
Product	: WAFFLE MAKER
Model Name	: JUMBO 4-SLICE
Item Code	: BWM04
Rated Voltage	: 230VAC
Rated Frequency	: 50Hz
Rated Power	: 1100W
<b>Household Use Only</b>	

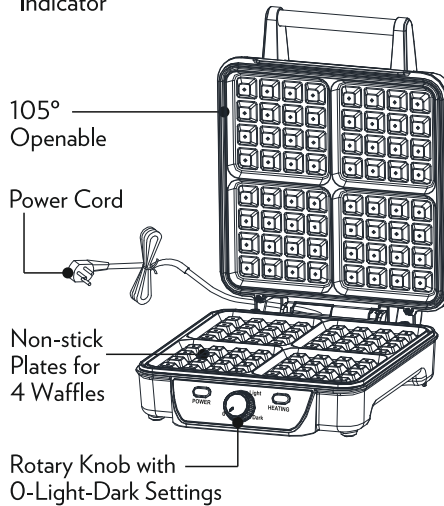 


## BEFORE USING YOUR WAFFLE MAKER

### BEFORE FIRST USE


- Read all instructions carefully and keep them for future reference.
- Peel off any plastic materials and packaging materials, and check that the cooking plates are clean and free of dust.
- If necessary, wipe over with a damp cloth.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray. This will assist in the removal of the Waffles after cooking results.
- Spread over with an absorbent kitchen towel and wipe off any excess oil.

**Note:** When your JUMBO 4-SLICE WAFFLE MAKER is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

 
## HOW TO USE

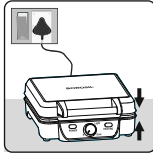

 
1. Close the plates and turn the unit on by plugging it into a standard electrical outlet.

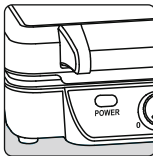

 
2. Check that the power indicator turns red.

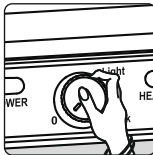

 
3. Turn the rotary knob to select the texture Light or Dark, you will notice that the Heating indicator will turn on, indicating that the appliance has begun preheating.

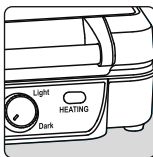

 
4. Allow your appliance to pre-heat until the Heating indicator Light turns off. This indicates that the cooking plates have reached the correct temperature for cooking.

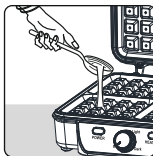

 5. Use the handle to lift the upper plate. Pour the batter on the lower plate.
6. Divide mixture into pan holes as per recipes using a jug & spoon or fabric piping bag.  
**Note:** Do not use disposable plastic piping bags as these may melt if they come into contact with hot plates.

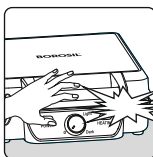


 7. Gently Close the upper plate while the waffle starts cooking. Do not slam the upper plate down as it may cause the mixture to run off the cooking plates.

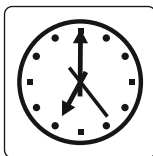


8. Allow to cook for approximately 15-25 minutes or until golden, as per your choice.

 9. If further cooking has to be done, close the plates again.
10. Repeat these steps until all cooking is complete, reapplying cooking oil as necessary.

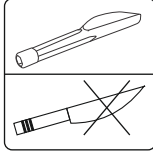

 11. To remove Waffles, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.

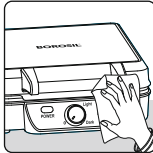

12. Turn off the unit by unplugging the power cord from the electrical outlet.

13. When the unit has completely cooled, clean and dry it.

**Note:** The cooking time for waffle depends on the type and ingredients of batter



## CAUTIONS

- The cooking plates and metal surfaces of the unit will become extremely hot when in use. To avoid a burn hazard, wear heat resistant mitts or gloves and touch only the black portion of the handle. Do not use this product to cook or defrost frozen food. Food must be completely defrosted before cooking it with this product.
- When the waffle starts cooking, initially steam will start coming out. This is normal.
- Do not use metal spatula on this product, as it will scratch and damage the plates' non-stick coating.

 


## CLEANING AND CARE

- Before cleaning, unplug and wait for the appliance and the plates to cool down.
- Wipe outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enters the cooling slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Dry with a cloth or paper towel.
- Do not immerse in water or any other liquid and do not run water directly on the cooking surfaces.
- Do not place in the dishwasher.
- Before next use, lightly grease the cooking plates for easy removal of cooked Waffles.

## STORAGE

- Always unplug the appliance before storage.
- Always make sure the appliance is cool and dry before storing.

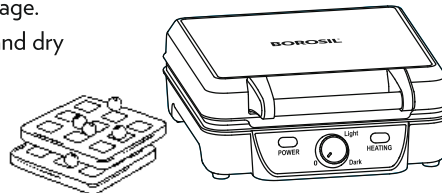

## WARRANTY FOR REPAIR & SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 550 / 1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorised Service Centre** and provide information about the defect with the model number and the serial number of the product.

### THE WARRANTY IS NOT VALID IN CASE:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

## ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal centre.

**WARRANTY CARD**

**BOROSIL®**

**THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED  
BY THE DEALER ON THE DATE OF PURCHASE**

MODEL CODE: BWMO4

CUSTOMER,S NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PHONE NO. RESIDENCE: \_\_\_\_\_ OFFICE: \_\_\_\_\_

DATE OF PURCHASE & BILL NO.: \_\_\_\_\_

DEALER NAME & SIGN: \_\_\_\_\_

CUSTOMER'S SIGNATURE: \_\_\_\_\_

**DEALER'S STAMP**

# BOROSIL®

## CORPORATE OFFICE:

### BOROSIL LIMITED

1101, G-Block, Crescenzo, BKC, Bandra (East), Mumbai- 400 051, Maharashtra.

Website: [www.myborosil.com](http://www.myborosil.com) | **Customer Care Toll Free No.:** 1800 224 552 / 1800 2106 520

Email id: [myborosil@borosil.com](mailto:myborosil@borosil.com) | Tel.: 022 6740 6300 | Fax: 022 6740 6514

CIN No.: L36100MH2010PLC292722

## SALES OFFICE:

### MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S Marg, Next to Kurla Bus Depot, Kurla (W),

Mumbai- 400 070. | Tel.: 022 6740 6400 | Fax: 022 6740 6444

email id: [mumbaisales@borosil.com](mailto:mumbaisales@borosil.com)

### DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi- 110 001.

Tel.: 011 2334 3897 | Fax: 011 2374 6689 | email id: [delhi@borosil.com](mailto:delhi@borosil.com)

### CHENNAI:

NEW No. 20, (Old No. 9) 1st Floor, Brahadammal Road, Nungambakkam, Chennai- 600 034.

Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014

email id: [borosilms@ethnet](mailto:borosilms@ethnet) / [chennai@borosil.com](mailto:chennai@borosil.com)

### KOLKATA:

E-2/3, 2nd Floor, Gilander House, Netaji Subhash Road, Kolkata, West Bengal- 700 001.

Tel.: 033 2229 9166 / 2226 2045 | email id: [calcutta@borosil.com](mailto:calcutta@borosil.com)

### GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector- 18, Gurugram,

Haryana- 122 015. | Tel.: 0124 6926 333

### BENGALURU:

Spatium South Park, 54, 1st Floor, 1st Main Rd, Sarakki Industrial Layout, Dollar Layout, 3rd Phase,

J. P. Nagar, Bengaluru, Karnataka 560078.

email id: [bangalore@borosil.com](mailto:bangalore@borosil.com)

**GOT A SERVICE-RELATED QUERY OR  
NEED CUSTOMER SUPPORT?**



SCAN THE QR CODE & PLACE YOUR  
SERVICE REQUEST ON WHATSAPP 24 x 7  
+91 7208487334

**TOLL FREE NUMBER**

**1800 224 552 /  
1800 2106 520**

Shop online at [www.myborosil.com](http://www.myborosil.com) | Follow us on    Borosil And You