

KRISPY POP-UP TOASTER 750W - BLACK

makes perfect, evenly browned toasts

BOROSIL[®]

Performs Beautifully



USER MANUAL

BTO01

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL KRISPY POP-UP TOASTER 750W - BLACK!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

1. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
2. Do not touch the hot surface. Use only handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or in any other liquid.
4. Close supervision is necessary when it is used by or near children.
5. Unplug unit from outlet when not in use and before cleaning.
6. Do not let the cord hang over edge of table or counter, or touch any hot surface.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. Please call Borosil Customer Care : **1800 224 552**
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. Do not use the appliance for any other use besides its intended use.
10. Oversized food, metal foil packages or utensils must not be inserted the toaster as they may cause fire or electric shock.
11. Since bread may burn, do not use toasters near or below curtains and other combustible materials.
12. Let the toaster cool completely before putting away.
13. Do not attempt to dislodge food while the toaster is plugged in. Unplug the toaster and allow to cool completely before carefully removing obstruction. Do not use a knife or similar sharp tool as these may cause damage to heating elements.
14. Do not clean with metal scouring pads, since the pad can break and pieces of it can touch electrical parts, involving a risk of electrical shock.
15. This toaster is intended for household use ONLY; it is not for commercial or industrial use.
16. Do not operate while unattended. Unplug after each use.
17. Extreme caution must be used when moving an appliance containing hot stuff.
18. To disconnect the toaster from electrical outlet, make sure Sliding lever is in the up position, then remove plug from electrical outlet.
19. Any service of the toaster should be performed by a Borosil Authorized Service Centre.
20. It is recommended to use only the accessories provided with the unit, to avoid injuries.
21. Do not keep the Dust Cover on the bread slot while the toaster is hot.
22. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

SAVE THESE INSTRUCTIONS

WARNING:

- Immediately unplug Toaster if fire or smoke is observed.
- Please read and save this User Manual for reference anytime.

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS:

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING:


Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD:

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.

DESCRIPTION OF THE PRODUCT

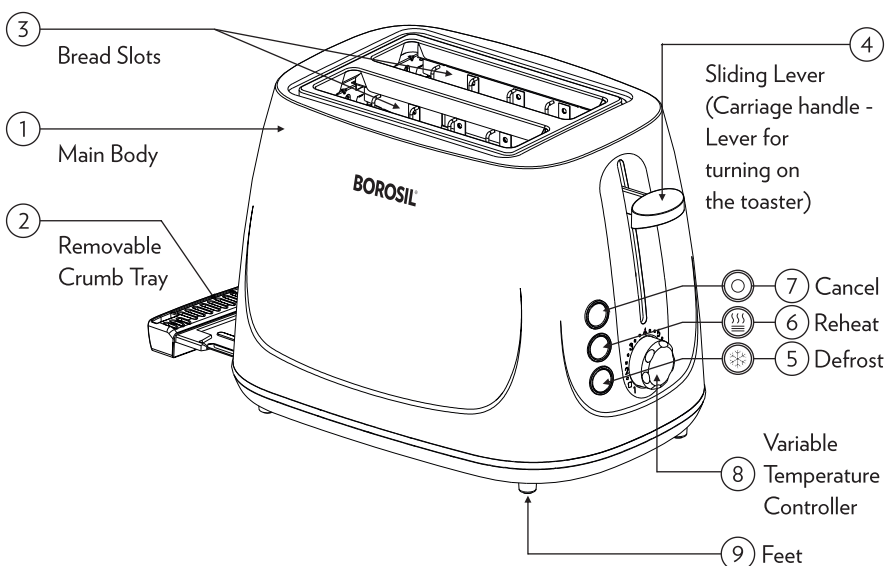

TECHNICAL SPECIFICATIONS

Product	: POP-UP TOASTER	Rated Voltage	: 230VAC
Model Name	: KRISPY 750W - BLACK	Rated Frequency	: 50Hz
Item Code	: BTO01	Rated Power	: 750W
HOUSEHOLD USE ONLY			

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.

- Dry with a cloth or paper towel.

Notice: When your KRISPY POP-UP TOASTER 750W - BLACK is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

TOASTING BREAD



1. Put the appliance in a safe place.
Plug the power in to the outlet.



2. Insert regular bread slice into the bread slots.
Two slices can be inserted at the same time.



3. Select the desired browning setting. The temperature sensor and electronic timer provide even toasting results. Select a low setting (1-2) for lightly toasted bread and a high setting (5-7) for a dark browning.

NOTE: If toasting continuously, the colour for the latter bread is darker than that for the initial bread at the same level.



4. Push the lever down to turn the appliance "ON".
The indicator of Cancel indicator will be illuminated.
The lever will only stay down if the appliance has been plugged into electrical outlet.



5. When the toast is ready, it pops up automatically. Then the toaster turns 'OFF' the heating elements.



6. **Defrost Button:** If the bread has been taken out from refrigerator, set the 7 setting Timer knob (Electronic Variable Control) to your desired setting. Press the sliding lever down vertically until it is positioned in place, then press 'Defrost button'. The Defrost indicator will be illuminated. In this mode it will be toasted to your desired color.



7. **Reheat Button:** If you want to reheat the cold toasted bread, press the sliding lever down vertically until it is positioned in place, then press "Reheat" button. The Reheat indicator will be illuminated. In this mode, toasting time is fixed, so when the fixed time is completed the sliding lever will automatically spring up and end the reheating process.




8. **Cancel Button:** During the toasting process, you can observe the toasting color. If it is satisfactory, you can interrupt the toasting process by pressing the "Cancel" button at any time, but never lift the lever to cancel toasting.

CAUTION:

1. Remove all protective wrapping prior to placing in toaster.
2. If toaster starts to smoke, press "Cancel" button to stop toasting immediately.
3. Avoid toasting the food with ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating element when removing bread.
5. The bread slot should only be used for toasting regular bread slices.
6. In order to achieve uniform colour it is recommended to wait for minimum 30 seconds between each toasting.

CLEANING AND MAINTENANCE

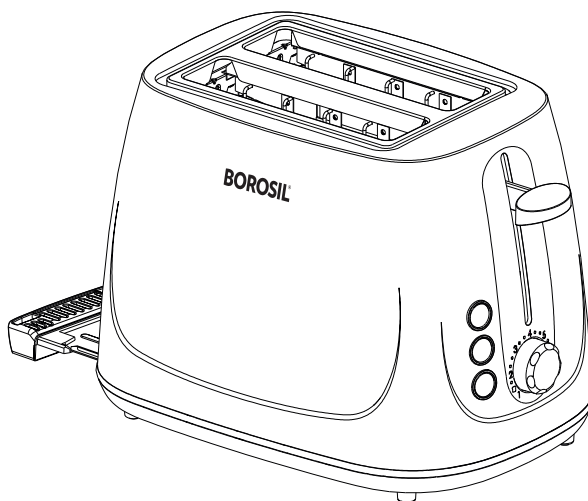

1. Disconnect the power supply before cleaning. Unplug cord from electrical outlet before cleaning.
2. Wipe the outside with a soft dry cloth after toaster cools down; never use metal polish.
3. Pull out the crumb tray at the bottom of the toaster and empty it. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. You can store the cord by looping it around the brackets on the base of the toaster.

WARNING:

In order to have a prolonged life of the product, cleaning of the product after use is necessary.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipment to an appropriate waste
disposal center.

WARRANTY FOR REPAIR AND SALES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case :

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD		BOROSIL®
THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED BY THE DEALER ON THE DATE OF PURCHASE		
MODEL CODE :	BTO01	
CUSTOMER'S NAME :		
ADDRESS :		
PHONE NO. RESIDENCE :		OFFICE :
DATE OF PURCHASE & BILL NO. :		
DEALER NAME & SIGN :		
CUSTOMER'S SIGNATURE :		
DEALER'S STAMP		

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahaddammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhau, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



GOT A SERVICE-RELATED QUERY OR
NEED CUSTOMER SUPPORT?



SCAN THE QR CODE &
PLACE YOUR
SERVICE REQUEST
ON WHATSAPP 24 x 7
+91 7208487334



Now shop India's most trusted brand online at www.myborosil.com

Follow us on    Borosil And You