

NEO 2.0 GRILL SANDWICH MAKER

makes the most deliciously grilled sandwiches

BOROSIL[®]

Performs Beautifully



USER MANUAL

BSM05

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL NEO 2.0 GRILL SANDWICH MAKER!


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

- Use only. 230V, 50Hz AC power supply.
- Do not use outdoors or for commercial purposes. (Only for household use).
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the appliance by yourself. Contact Borosil Customer Care Toll Free No. **1800 224 552** or **myborosil@borosil.com** for examination and repair.
- Do not touch hot surfaces. Use handles. Do not move the appliance while it is plugged in. Allow the product to thoroughly cool before handling it.
- Unplug from outlet when not in use and before cleaning.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not put any stress on the power cord where it connects to the product as the power cord could fray and break.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Do not plug or unplug the product into/from an electrical outlet with a wet hand.
- Use the appliance in a well-ventilated area. Keep at least 4-6 inches of space on all sides of the appliance to allow adequate air circulation.
- Do not place the appliance on or near a gas or electric burner, or inside or on top of a heated oven or other heat source.
- Do not allow the appliance to touch curtains, wall coverings, clothing, dishtowels, or other flammable materials during its use.
- Do not leave the appliance unattended while it is in use. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Before using, place the appliance on an even, stable surface heat-resistant surface; operate according to the instructions given.
- Use this appliance only for its intended use, as described in this manual. Do not use any accessory attachment which is not provided in the product packing box.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its power cord out of reach to the children.

PART IDENTIFICATION

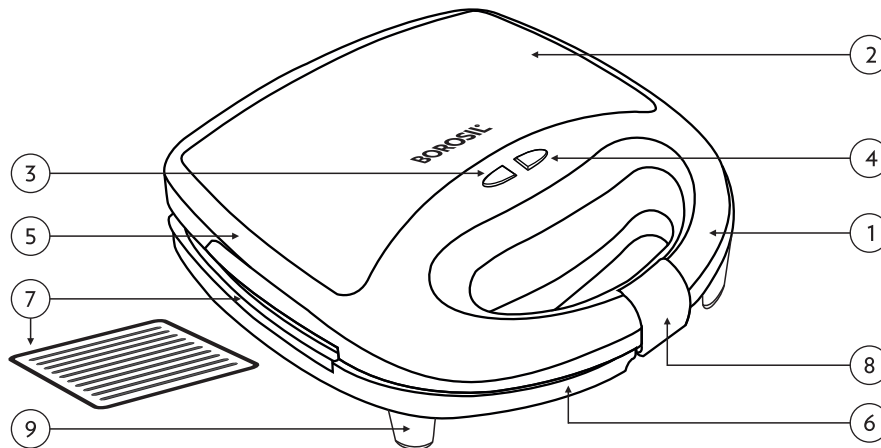

Part Identification:

- 1) Cooltouch Handle
- 2) Stainless Steel Top Cover
- 3) Power Indicator (RED)
- 4) Heating Indicator (GREEN)
- 5) Upper Housing
- 6) Lower Housing
- 7) Non-stick Grilling Plates
- 8) Handle Lock Clip
- 9) Anti-skid Feet

TECHNICAL SPECIFICATIONS

Product	: SANDWICH MAKER
Model Name	: NEO 2.0 GRILL
Item Code	: BSM05
Rated Voltage	: 230VAC
Rated Frequency	: 50Hz
Rated Power	: 750W
Household Use Only	

BEFORE USING YOUR SANDWICH MAKER

- Read all instructions carefully and keep them for future reference.
- Peel off any plastic materials and packaging materials, and check that the cooking plates are clean and free of dust.
- If necessary, wipe over with a damp cloth.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray. This will assist in the removal of the Sandwiches after cooking results.
- Spread over with an absorbent kitchen towel and wipe off any excess oil.

Note: When your NEO 2.0 GRILL SANDWICH MAKER is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

- Before using first time for grilling, close the Neo 2.0 Grill Sandwich Maker and plug it into the wall outlet, you will notice that the red power and green heating light will come on, indicating that the Neo 2.0 Grill Sandwich Maker has begun preheating
- After some time, the green heating light will go off
- Open the lid, put the food on the bottom cooking plate
- Place prepared sandwiches on the bottom cooking plate, near the back of the Neo 2.0 Grill Sandwich Maker
- Close the lid.
- Grilling will take a few minutes, depending on the type of bread and filling you're using. Check your sandwich often to ensure it is being grilled to your liking.
- When your sandwich is ready, use a plastic or wooden spatula to remove it from the Neo 2.0 Grill Sandwich Maker. Do not use metal utensils, as they will damage the non-stick surface of the cooking plates.



CLEANING AND CARE

- Always unplug the Neo 2.0 Grill Sandwich Maker and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Neo 2.0 Grill Sandwich Maker for cleaning. Never immerse the Neo 2.0 Grill Sandwich Maker in water
- Wipe cooking plates with a soft sponge to remove food residue. For cleaning the food residue, squeeze some warm water mixed with detergent over the food residue, then clean with a non-abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue
- Do not use anything abrasive that can scratch or damage the non-stick coating
- Do not use metal utensils to remove your foods, they can damage the non-stick surface
- Wipe the outside of the Neo 2.0 Grill Sandwich Maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid
- Do not place in the dishwasher

STORAGE

- Always unplug the appliance before storage.
- Always make sure the appliance is cool and dry, and the handle is locked before storing

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS:

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING:

Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD:

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: Hand in the non-working electrical equipment to an appropriate waste disposal centre.

WARRANTY FOR REPAIR & SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or Borosil Authorized Service Centre and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product is used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD

BOROSIL®

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE

MODEL CODE : BSM05

CUSTOMER'S NAME : _____

ADDRESS : _____

PHONE NO. RESIDENCE : _____ OFFICE : _____

DATE OF PURCHASE & BILL NO. : _____

DEALER NAME & SIGN : _____

CUSTOMER'S SIGNATURE : _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm