

PRIMUS III 500W JUICER

BOROSIL[®]

Performs Beautifully



USER MANUAL

BJU50PBW22

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

— |

| —

— |

| —

INTRODUCTION

**Congratulations on your purchase of
BOROSIL PRIMUS III 500W JUICER !**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


Read all instructions before using the product.

- Use only, 230V, 30Hz AC power supply.
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the product by yourself. Contact Borosil Limited for examination and repair.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Before using, place the appliance on an even, stable surface; operate according to the instructions given.
- During the juicing procedure, ensure that the middle body is not full of juice or the pulp container is not full of residue. In case it is full, switch off the appliance, clean it and then use again.
- While the appliance is running, do not open the jug cover. Do not put your hand or any other utensil into the transparent cover inlet or feed port while in operation, since this may cause injury or damage the appliance.
- In order to prolong the life of the appliance, overload protective device is mounted in the motor. If the motor works for a long time or is overloaded, or if overheating occurs, power supply is automatically cut off. After the motor stops, remove the power cord from the power supply, wait for the motor to cool (about for 30 mins) and then reuse.
- When the juicing procedure is over, do not pour the juice out until you remove the power cord from the power supply.
- Wash the juicer mesh blade under the tap water pressure. Since the juicer blades are very sharp, it may cause injury if it is washed by hands.
- Do not operate the appliance for other than its intended use.

DESCRIPTION OF PRODUCT

Part Description:

1. Pusher
2. Top cover
3. Middle body
4. Juice outlet nozzle
5. Main unit
6. Locking clip
7. Switch knob
8. Juice collector jug
9. Juicer mesh

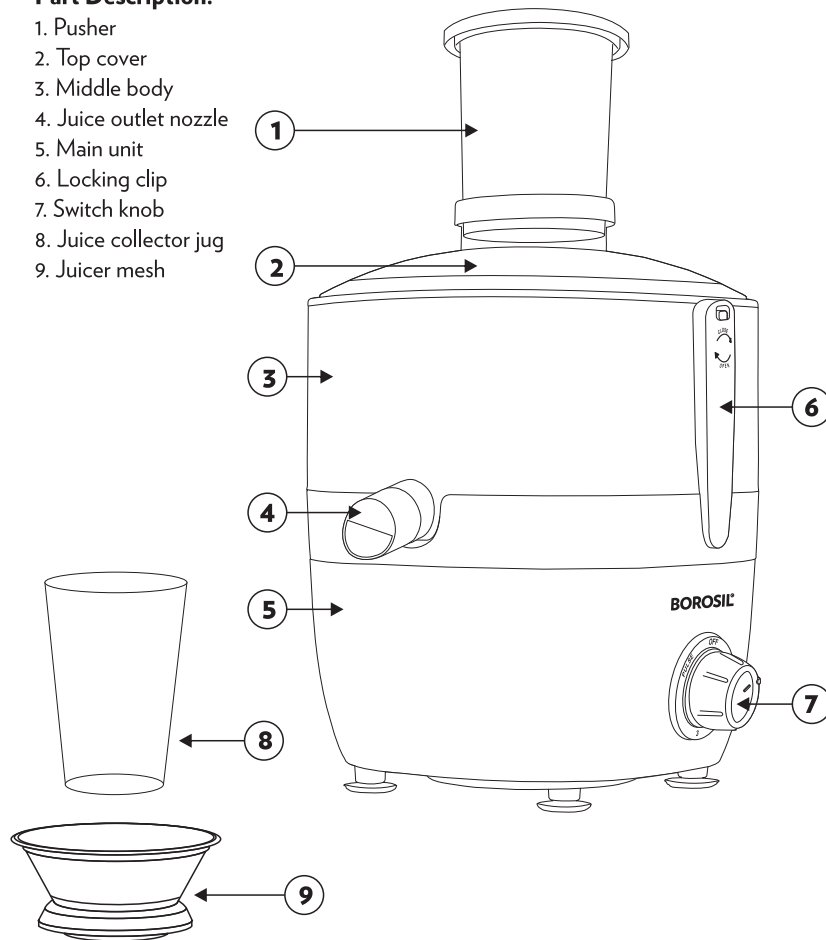

List of fruits & vegetables recommended for juicing

- Apple
- Orange
- Pine Apple
- Pomegranate
- Beetroot
- Citrus
- Cucumber
- Bitter Gourd etc .

TECHNICAL DATA:

Specifications : 500W, 230V-50Hz

HOW TO USE

BEFORE USING

- Read all instructions carefully and keep them for future reference.
- When assembling, follow the diagram (Description of Product) carefully.
- While assembling or disassembling the juicer, make sure that the locking clips are properly engaged or disengaged.
- While disassembling the juicer mesh, first remove the cover and then tilt the juicer mesh about 30 degree upward, the juicer mesh will leave the motor coupler automatically.
- In order to avoid damage, ensure that the power supply is in compliance with the rated voltage.
- Clean all parts that can be disassembled (refer to the “maintenance and cleaning” section).

JUICING PROCEDURE

- Before starting the juicing procedure, ensure that the main unit rotatory switch is at 0 setting ie OFF position. This is to ensure in case the assembly is not completed the appliance will not start accidentally, thus avoiding injury or damage to property.
- Before starting the juicing procedure, ensure that juicer mesh and rotor are in position, and there is no contact between the juicer mesh blades and transparent cover. Put the transparent cover on, fasten the handle, then turn on the appliance.
- Before using, ensure that the juicer spout is in the drip position. After turning off the appliance, put the juicer spout to anti-drip position so as to avoid the juice from spilling on to the table.
- Assemble the appliance according to the diagram given (Description of Product). Turn on the power supply, and press the switch to let the appliance run without load for 5 sec. Then put the prepared vegetable or fruit into the feed port of the juicer and press down with the pusher.
- Make sure that the material such as carrot is cleaned & hard root is removed and cut into small pieces before putting it into juicer.
- Note : When pressing food with the pusher, ensure that the force used should be even and not more than 1 kg. Avoid sudden force, otherwise, juicing effect will be reduced.

OPERATING TIME

This appliance has the following rotatory switch positions :

3 Speed Options : Pulse - OFF (0) - Juice - 2 - 3

Before starting the juicing procedure, select the position required. After operating the appliance for 3 minutes, keep a gap of 1 minute, then use again. After the above procedure is performed three times, stop for 15 minutes. Do not operate until the motor is cooled. This is necessary to ensure that the service life of the appliance is prolonged thus giving you years of efficient service. Motor unit should not be run without juicing for more than 1 min.

MAINTENANCE AND CLEANING

- For prolonging the life of the appliance, keep the motor clean and dry.
- If the appliance has not been used for a long time, store it in a dry and well-ventilated place so as to prevent the motor from getting damp.
- Do not wash the main unit. For cleaning, just wipe the main unit with a damp cloth. Other components such as pusher, transparent cover, middle body, pulp container, juice nozzle cover can be washed directly with water.

WARRANTY FOR REPAIR AND SERVICES

This product comes with a warranty of TWO YEARS on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case :

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment !

Please remember to respect the local regulations : hand in the non-working electrical equipments to an appropriate waste disposal center.

WARRANTY CARD

BOROSIL®

**THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE**

MODEL CODE: BJU50PBW22

CUSTOMER'S NAME: _____

ADDRESS: _____

PHONE NO. RESIDENCE: _____ OFFICE: _____

DATE OF PURCHASE & BILL NO.: _____

DEALER NAME & SIGN: _____

CUSTOMER'S SIGNATURE: _____

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE:

BOROSIL LIMITED

1101, G-Block, Crescenzo, BKC, Bandra (East), Mumbai- 400 051, Maharashtra.

Website: www.myborosil.com | **Customer Care Toll Free No.:** 1800 224 552 / 1800 2106 520

Email id: myborosil@borosil.com | Tel.: 022 6740 6300 | Fax: 022 6740 6514

CIN No.: L36100MH2010PLC292722

SALES OFFICE:

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S Marg, Next to Kurla Bus Depot, Kurla (W),

Mumbai- 400 070. | Tel.: 022 6740 6400 | Fax: 022 6740 6444

email id: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi- 110 001.

Tel.: 011 2334 3897 | Fax: 011 2374 6689 | email id: delhi@borosil.com

CHENNAI:

NEW No. 20, (Old No. 9) 1st Floor, Brahadammal Road, Nungambakkam, Chennai- 600 034.

Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014

email id: borosilms@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gilander House, Netaji Subhash Road, Kolkata, West Bengal- 700 001.

Tel.: 033 2229 9166 / 2226 2045 | email id: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector- 18, Gurugram,

Haryana- 122 015. | Tel.: 0124 6926 333

BENGALURU:

Spatium South Park, 54, 1st Floor, 1st Main Rd, Sarakki Industrial Layout, Dollar Layout, 3rd Phase,

J. P. Nagar, Bengaluru, Karnataka 560078.

email id: bangalore@borosil.com

**GOT A SERVICE-RELATED QUERY OR
NEED CUSTOMER SUPPORT?**



SCAN THE QR CODE & PLACE YOUR
SERVICE REQUEST ON WHATSAPP 24 x 7
+91 7208487334

TOLL FREE NUMBER

**1800 224 552 /
1800 2106 520**

Shop online at www.myborosil.com | Follow us on    Borosil And You