

PRONTO - 2.8 L

RICE COOKER

BOROSIL®

Performs Beautifully



USER MANUAL

BRC04

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL PRONTO - 2.8 L RICE COOKER!

 
IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using the product.
2. Do not touch hot surfaces. Use the handles or knobs.
3. Use only on a level, dry and heat-resistant surface.
4. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid. See instructions for cleaning.
5. Close supervision is necessary when the appliance is used by or near children. Do not let children use the appliance by themselves.
6. Unplug from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or loosely connected to the power cable. If the appliance malfunctions or has been damaged in any manner, contact customer service for examination, repair or adjustment.
8. The use of accessory attachments not recommended by Borosil Limited may result in fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not let cord touch hot surfaces or hang over the edge of a counter or table.
11. Do not place on or near a hot burner or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Extreme caution must be used when moving the appliance containing rice, hot oil or other liquids.
14. Do not touch, cover or obstruct the steam vent on the top of the rice cooker as it is extremely hot and may cause scalding.
15. Use only with a 230V AC power outlet.
16. Do not plug or unplug the Power Plug with wet hands.


THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

DESCRIPTION OF THE PRODUCT

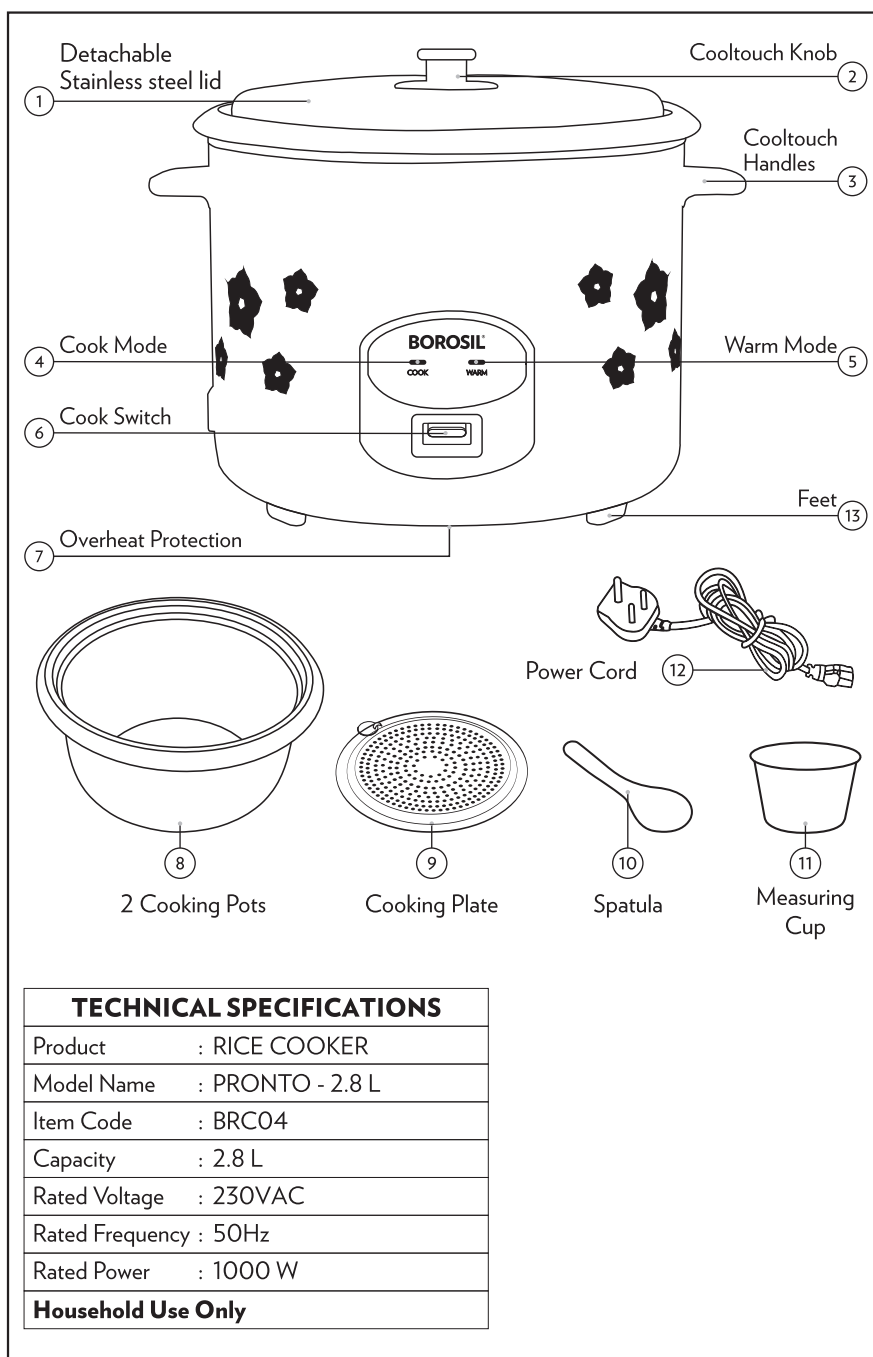

HOW TO USE

 1

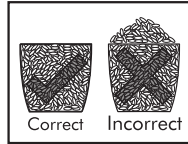


Measure rice with standard cup. One cup of uncooked rice makes

approximately 3 cups of cooked rice. The markings in the pot are not absolute, because various kinds of rice absorb water differently

2

Rinse rice by washing it thoroughly until water becomes relatively clear. Otherwise, rice may get burnt at the bottom or smell like rice bran.

 3

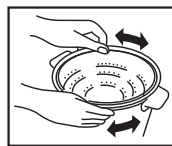

Place the pan inside the body. Ensure that the pan is directly in contact with the

cast heater by turning it slightly 2-3 times until it fits properly. Wipe the surface of the pan before use. If it is wet, it may cause noise while cooking. Any foreign matter between the pan and the cast heater may damage the Electric rice cooker.

 
4

Close the lid firmly.


5

Insert the power plug; the switch lamp switches on. Do not plug in until ready to cook. Otherwise, the rice may get spoiled. The "Cooking" function will not start, unless the pan is inserted properly in to the Electric rice cooker.

6

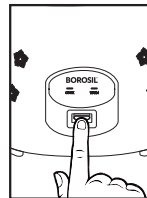

 Press the switch. The "Cooking" indicator glows Orange, which signifies that cooking has started. When the rice is cooked, the switch will pop up. The "Keep Warm" indicator changes to Yellow, which signifies that the Electric rice

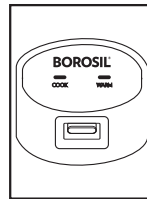

cooker is in the "Keep Warm" mode.

7

After the switch pops up, leave the lid closed for about 15 minutes to fully steam the rice. After that the rice is ready to be served.

8

Unplug the Electric rice cooker when it is not in use.

CONSUMER SAFETY INFORMATION

GROUNDING INSTRUCTIONS :

This appliance is equipped with 3-wire cord having a grounded plug. This plug must be plugged into a properly installed and grounded outlet.

WARNING :

Improper use of the grounding wire may result in the risk of electric shock. Consult a qualified electrician if necessary. Do not attempt to defeat this safety feature by modifying the plug.

POWER CORD :

A power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over longer cord. If it is necessary to use an extension cord, it should be positioned in such a way that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over and;

1. Use only 3-wire extension cord with a 3-prong grounded plug.
2. The marked rating of the extension cord must be equal to or greater than the rating of the appliance. The rating label is located on the unit.



CAUTION

- Do not expose the rice cooker to direct sunlight.
- Place the rice cooker on a stable, horizontal and level surface.
- To prevent overflow, do not exceed the maximum water level indicated in the inner pot.
- Do not leave the Power Plug connected to the power outlet when the Pan is not in the appliance or the appliance is not in use.
- Do not switch to "cooking" mode again during "keep warm" function.
- Do not keep rice in "keep warm" mode for more than 4 hours.
- Do not use "keep warm" function to reheat cold rice.
- Do not use the Pan directly on the flame.
- Handle the Pan carefully when cleaning, washing or serving food. Any damage to the bottom surface of the Pan, results in overheating of the Cast Heater and affects the cooking performance.

CLEANING AND MAINTENANCE

- After use and before cleaning, switch off the rice cooker and remove the plug from the wall socket.
- Wipe the cooker body with a damp cloth only and dry with another cloth.
- Never use metal polish / abrasive cleaners or coarse scouring agents for cleaning and never immerse the rice cooker in water or any other liquid.
- To clean the cooking pan after use, pour some water in it and allow it to soak for 10-15 minutes. Then wash with a mild liquid powder detergent using sponge. Do not use sharp objects or any abrasive substance.

WARRANTY FOR REPAIR & SERVICES

This product comes with a warranty of Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case:

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment !

Please remember to respect the local regulations: Hand in the non-working electrical equipments to an appropriate waste disposal center.

WARRANTY CARD

BOROSIL®

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED
BY THE DEALER ON THE DATE OF PURCHASE

MODEL CODE : BRC04

CUSTOMER'S NAME :

ADDRESS :

PHONE NO. RESIDENCE : OFFICE :

DATE OF PURCHASE & BILL NO. :

DEALER NAME & SIGN :

CUSTOMER'S SIGNATURE :

DEALER'S STAMP

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm