

SILVERLINE
750W MIXER GRINDER

BOROSIL®

Performs Beautifully



CM/L NO. 9600032115



USER MANUAL

HAMG750W17

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

INTRODUCTION

Congratulations on your purchase of
BOROSIL SILVERLINE 750W MIXER GRINDER!

 
IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using the product.

- Use only 230V, 50Hz AC power supply.
- The mixer grinder is for household use only. Do not use outdoor or for commercial purposes.
- Do not operate the appliance if it has malfunctioned or has been damaged in any manner. Never try to repair the product by yourself. Contact Borosil Limited for examination and repair.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- This appliance is not intended for usage by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless under supervision or given instructions concerning the usage of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Before using, place the appliance on an even, stable surface; operate according to the instructions given.
- Keep the mixer grinder at least 6" (150 mm) away from the walls for proper ventilation.
- Do not place the mixer grinder on a wet surface.
- Sufficient space should be available around the mixer grinder for keeping the various items and ingredients required.
- Always ensure that speed selector is at OFF position before fixing accessories.
- Never try to touch the moving parts or blades of the mixer grinder while in operation.
- The blades are sharp and should be handled very carefully. Wash them under running water and do not rub them by hand.
- Never operate the mixer grinder without the jar lid or dome in place.
- Always make sure the jar has been locked in the slot before operating.
- Never operate the mixer grinder without any load in the jar.
- Handle the jar and the main unit with care.
- Do not operate the appliance for other than its intended use.

DESCRIPTION OF PRODUCT

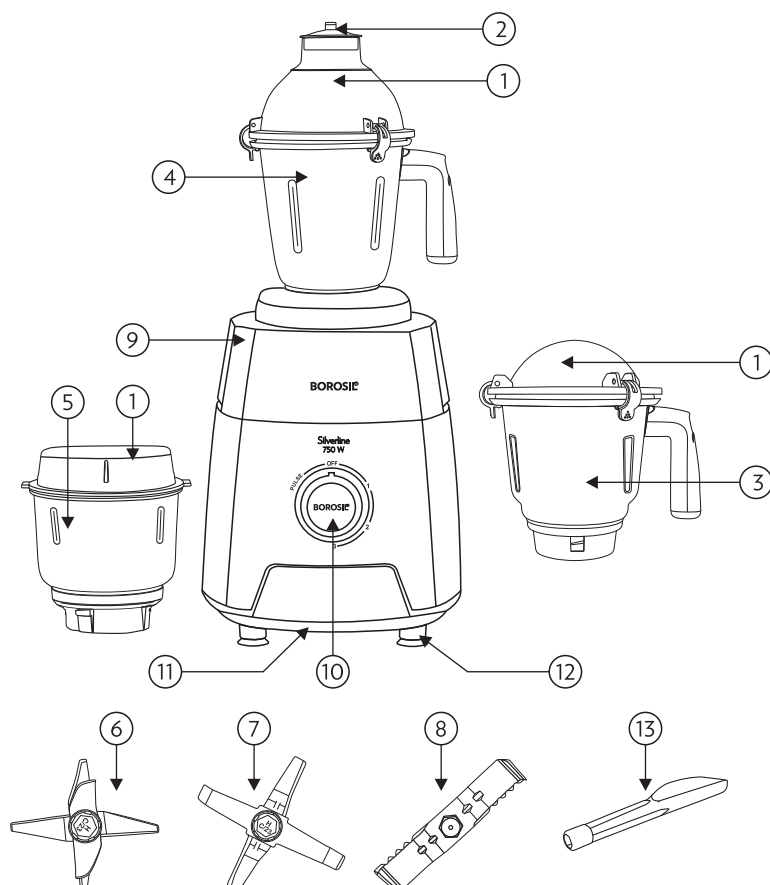

1. Jar lids
2. Dome lid stopper
3. 1.5 liter blending jar
4. 1 liter dry/wet grinding jar
5. 400 ml chutney jar
6. Liquidizing blade for blending jar
7. Multi purpose blade for dry/wet grinding jar
8. Chutney grinding blade
9. Motor unit
10. Switch knob
11. Over load protector
12. Anti-skid feet
13. Spatula/tool to remove blade from large & medium jars

TECHNICAL SPECIFICATIONS

Product	: MIXER GRINDER
Model Name	: SILVERLINE 750W
Item Code	: HAMG750W17
Rated Voltage	: 230VAC
Rated Frequency	: 50Hz, PROTECTION CLASS - I
Rated Power	: 750W
Rating	: 30 minutes (Approx)
Speed (RPM)	: 20000
HOUSEHOLD USE ONLY	
DO NOT IMMERSE IN WATER	

GENERAL INSTRUCTIONS

- **3 Position Rotary Switch:** By turning the switch clockwise you can select the desired speed.
- **Pulse Function:** Turn the switch knob anti clockwise from the OFF position to use the pulse function
- Always turn the switch to the OFF position before storing the appliance for next use, to avoid accidents.

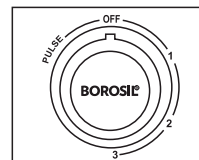 


Fig. 1

HOW TO USE

LIQUIDIZING / BLENDING JAR

The stainless steel blending jar (refer figure 2) is used for liquidizing & blending purpose. It can be used for preparation of shakes, purees etc.

- Put all the ingredients to be liquidized or blended in the jar.
- Safely put the jar lid in place.
- Now switch the appliance for operation.

NOTE: JAR CAPACITY: 1.5 L MAX. USABLE CAPACITY: 600 ml

- Always ensure proper fixing of the jar lid.
- Keep a hand on the jar lid while on operation.
- Do not use bigger size of ice pieces while blending or liquidizing to avoid damage of blade & jar.
- Initially use pulse for better results.
- Do not use this jar for dry grinding.

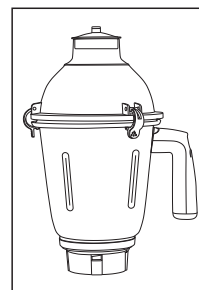 


Fig. 2

CHUTNEY JAR

The chutney jar (refer figure 3) is used for small quantity grinding such as green chutney, red chilli, coconut chutney, pepper etc.

NOTE: JAR CAPACITY: 400 ml MAX. USABLE CAPACITY: 160 ml

- Always ensure the jar lid is tightly fixed. Keep a hand on the jar lid while using it.

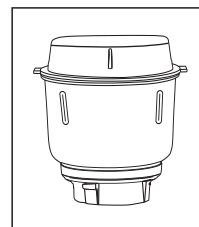 


Fig. 3

DRY/WET GRINDING JAR

The grinding jar (refer figure 4) is used for grinding items like garam masala, wet masala, idli and dosa batter, sugar, etc.

- Use small pieces of ingredients for grinding
- Add water, as per requirement, in case of wet grinding
- Put the jar lid on top of the jar & lock it by using lid clips
- Grind at "2" speed for 15-30 seconds and then move to "3" speed.

NOTE: JAR CAPACITY: 1 L MAX. USABLE CAPACITY: 400 ml

- Always ensure proper fixing of the jar lid. Keep a hand on the jar lid while using it.
- Always move gradually from lower speeds to higher speed.
- During grinding process, the jar might get heated up due to friction. Do not panic, this is normal.

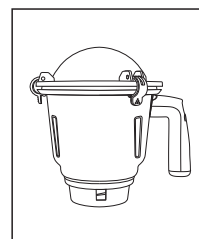 


Fig. 4

OVERLOAD PROTECTION (OLP)

- The overload protector (OLP) is designed to protect the motor from burning.
- In case of an overload the blade of the jar stops rotating and the motor gets jammed and starts heating up. The OLP trips off and the motor stops automatically.
- Turn the knob to off position and remove the jar.
- Let the motor cool down for a couple of minutes and then reset the OLP by pressing the red button situated at the bottom of the body.
- If you have to reset the OLP again and again, try reducing the quantity in the jar.



Fig. 5

USE & CARE / PRECAUTION

- Before starting the mixer grinder for the first time or after a long period of unuse, rotate the motor shaft with hand to ensure that it turns freely and smoothly. Make sure the unit is not connected to the electric supply source.
- Similarly rotate the jar coupler to ensure the blade turns freely and smoothly as well.
- Insert the jar collar into the motor body and twist it to lock it in the slot.
- Now plug in the power cord and the mixer grinder is ready for use.
- Do not use your mixer grinder without load and make sure the jar lid is in place before operating the appliance.
- Do not operate the mixer grinder unless the attachments are locked into position.
- Do not burden motor with loads heavier than what is recommended.
- The body of the mixer grinder or the supply cord should never be immersed in water while operation or cleaning.
- Never pull the cord to take out the plug from the socket. Grip the plug and pull out of the socket after duly switching off the power supply.
- Always remove the plug from the power supply before cleaning, while emptying or when not in use. Store the appliance in a clean and dry place.

Note: Flat lid and Chutney lid of the jars must be held by hand during the operation.

TIPS

- When using for dry grinding, fill the jar up to the level of the blades.
- When using for wet grinding and blending, fill jars up to 2.5 cm from top of jar.
- Cut all firm fruits and vegetables into pieces no larger than 1.8 cm (1/2 inch) to 2.5 cm (1 inch). Cut all kinds of cheese into pieces no larger than 1.8 cm (1/2 inch).

Caution: Operate only with lids in place.

GENERAL CLEANING AND CARE FOR THE MIXER GRINDER

- The cleaning of the mixer grinder and jars are very necessary for maintaining smooth operation of the mixer grinder and to maintain proper hygiene.
- After you have used the mixer grinder, use lukewarm water to remove leftover material from the jars and then rinse under running water.
- In order to clean the blades thoroughly, remove the blades by using the spatula (refer figure 7) to loosen the screw by twisting the dome nut on the blade clockwise, while holding the coupler from under the jar.
- When removing the blade please keep the washer safely for fitting again.
- The jars can be cleaned by using regular dishwashing soap.
- After thoroughly rinsing the soap, clean the jars with a dry cloth.
- Never store the jars with the lids fitted. This results in problem of odour in jars. For cleaning the body of the mixer grinder, use a soft wet cloth.
- Do not use any detergent/soap solution on the main body.
- Clean the body with a dry cloth before storage for next use.
- Never immerse the motor in the water for cleaning.

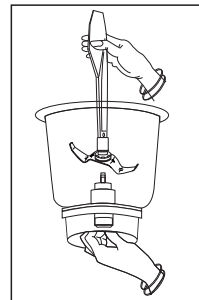 


Fig. 6

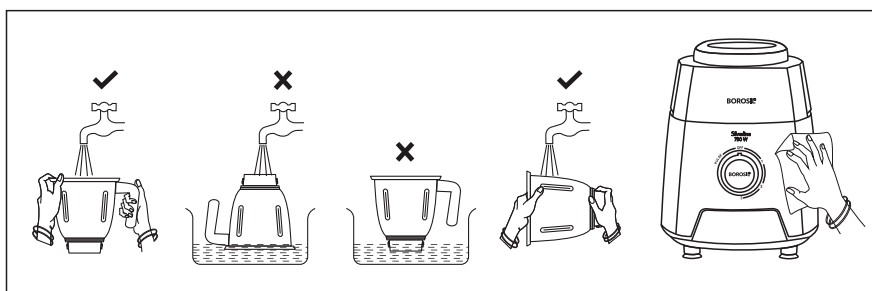 


Fig. 7

ENVIRONMENT FRIENDLY DISPOSAL



Correct disposal of this product

To prevent possible harm to the environment or human health from uncontrolled waste disposal recycle this product responsibly to promote sustainable reuse of material resources.

Jar Capacity :

Sl.	Type of Jar	Capacity	Wet Capacity (rated) max.	Dry Capacity (rated) max.	Chutney Capacity (rated) max.
1	Liquidizing jar	1.75L	0.7L	NA	NA
2	Liquidizing jar	1.50L	0.6L	NA	NA
3	Liquidizing jar	1.25L	0.5L	NA	NA
4	Liquidizing jar	1.00L	0.4L	NA	NA
5	Dry/wet grinding jar	1.2L	NA	0.48L	NA
6	Dry/wet grinding jar	1.0L	NA	0.4L	NA
7	Dry/wet grinding jar	0.8L	NA	0.4L	NA
8	Dry/wet grinding jar	0.6L	NA	0.32L	NA
9	Chutney grinding jar	0.4L	NA	NA	0.16L
10	Chutney grinding jar	0.5L	NA	NA	0.2L
11	Chutney grinding jar	0.3L	NA	NA	0.12L

Standard Recipes

Sl.	Recipe	Quantity	Time
1	Urad Daal	For 1.2L & lesser capacity: 160g + 370ml water soaked for 12hrs. As and when needed 75ml water can be added.	3 min.
2	Parboiled Rice	For 1.2L & lesser capacity: 160g + 180ml water soaked for 12hrs. As and when needed 38ml water can be added.	3 min.
3	Turmeric / Coffee	For 1.2L & above jar capacities: 300g of assorted spices roasted and cooled. For 1.0L & lesser jar capacities: 250 of assorted spices roasted and cooled.	3 min.
4	Wet Masala	For 0.3L, 0.4L & 0.5L: 100g onion + 60g tomato	2 min.
5	Ginger garlic paste	For 0.3L, 0.4L & 0.5L: 80g ginger + 80g garlic	2 min.
6	Banana Shake	For 1.5L & lesser jar capacities: 3 Pcs Banana + 50g Ice-cream (Optional + 500ml milk (sugar as per taste)	3 min.
7	Tomato Puree	For 1.5L & lesser jar capacities: 250g medium sized tomatoes cut in 4 pieces.	2 min.
8	Lassi	For 1.5L & lesser jar capacities: 300g curd + salt/sugar (as per taste)	1 min.

For wet /dry/chutney grinding use speed “1” and speed “2” only for 10-15 seconds. Thereafter use speed “3” till you finish operation. Remove the plug from the socket after use.

NOTE - This being common chart, Jar capacities to be referred as per model

Recommended quantities for juicing with fruit filter

No.	Fruit	Quantity
1	Tomatoes (cut fruits into small pieces and begin juicing after adding 50 ml of water)	250g
2	Grapes	250g
3	Watermelon/sweet lime/orange/(cut into small pieces)	250g

Recommended quantities for juicing with fruit filter

No.	Fruits	Quantity
1	Apples	2.0Kg
2	Pineapples	1.5Kg
3	Carrots	1.5Kg
4	Sweet lime	1.0Kg

Note:

- This is a common chart, Juicing function is available in select models.
- Following fruits such as Mangoes, Papaya, Chikoo and similar should not be in the centrifugal juicer. These fruits are recommended to be blended in the blender jar with the addition of water/milk.
- The above listed quantities of fruits can be juiced without in between cleaning of the appliance.

WARRANTY FOR REPAIR AND SALES

This product comes with a warranty of Five Years on motor, Two Years on product from the date of purchase as specified on the Warranty Card. This is against all defective material or workmanship. In the event of a defect, Borosil Limited at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through any Borosil Authorized Service Center or at customer place or with dealer from whom it has been purchased during the warranty period.

For any information or problem, contact Borosil Customer Care Toll free no. **1800 224 552** or e-mail us at **myborosil@borosil.com** or contact your local dealer or **Borosil Authorized Service Centre** and provide information about the defect with the model number and the serial number of the product.

The warranty is not valid in case :

1. Product is not used according to user manual.
2. Defects caused by improper or reckless use.
3. Repairs done by persons other than Borosil Authorized Service Centre.
4. Modifications of any nature made in the product.
5. Tampered serial number and incomplete warranty card after purchase.
6. Product if used for commercial purpose (i.e. other than domestic use)
7. Usage of parts not recommended by Borosil or those made by other manufacturers.
8. The model no. on the invoice is different from the product to be repaired
9. Borosil is not responsible for accidents arising due to the use of accessories not designed for the utilisation with this product.
10. If the defects are caused by fire, flood and the other act of god.
11. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
12. All consumables and parts susceptible to normal wear & tear are not covered under warranty.
13. This warranty does not cover damage or injury caused by accident, mishandling, misuse or normal wear and tear or for loss of injury, directly or indirectly arising out of use of this product. The decision of the company in this regard shall be final.
14. If the product is used with any type of adapter or connector.
15. If the product is used in locations with different electrical specifications.

WARRANTY CARD		BOROSIL®
THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY, SIGNED AND STAMPED BY THE DEALER ON THE DATE OF PURCHASE		
MODEL CODE :	HAMG750W17	
CUSTOMER'S NAME :		
ADDRESS :		
PHONE NO. RESIDENCE :		OFFICE :
DATE OF PURCHASE & BILL NO. :		
DEALER NAME & SIGN :		
CUSTOMER'S SIGNATURE :		
DEALER'S STAMP		

BOROSIL®

CORPORATE OFFICE :

BOROSIL LIMITED

1101, G-Block, Parinee Crescenzo, BKC, Bandra (East), Mumbai - 400 051, Maharashtra.
Website: www.borosil.com | Customer Care Toll Free No.: 1800 224 552
Email id: myborosil@borosil.com | Tel: 022 6740 6300 | Fax: 022 6740 6514
CIN NO.: L36100MH2010PLC292722

SALES OFFICE :

MUMBAI:

Kanakia Zillion, B-Wing, Unit No. 306, L.B.S. Marg, Next to Kurla Bus Depot,
Kurla (W), Mumbai - 400 070.
Tel.: 022 6740 6400 | Fax: 022 6740 6444
email: mumbaisales@borosil.com

DELHI:

19/90, P-Block, Connaught Place (Madras Hotel Block), New Delhi - 110 001.
Tel.: 011 2334 3897 / 2374 2136 | Fax: 011 2374 6689
email: delhi@borosil.com

CHENNAI:

New No. 20, (Old No. 9) 1st Floor, Brahdammal Road, Nungambakkam, Chennai - 600 034.
Tel.: 044 2822 6012 / 2822 6013 | Fax: 044 2822 6014
email: borosilmso@ethnet / chennai@borosil.com

KOLKATA:

E-2/3, 2nd Floor, Gillander House, Netaji Subhash Road, Kolkata, West Bengal - 700 001.
Tel.: (033) 2229-9166, 2226-2045
email: calcutta@borosil.com

GURUGRAM:

201, 2nd Floor, CRS Towers, Plot No. 77-B, Village Sarhaul, Iffco Road, Sector-18,
Gurugram, Haryana - 122 015. Tel.: +91 124 6926 318



Now shop India's most trusted brand online at www.myborosil.com

Follow us on Borosil And You

Back Cover - Close Size - 140 x 215 mm